


Serenity Progressive Pull Out Kitchen Set

Nero

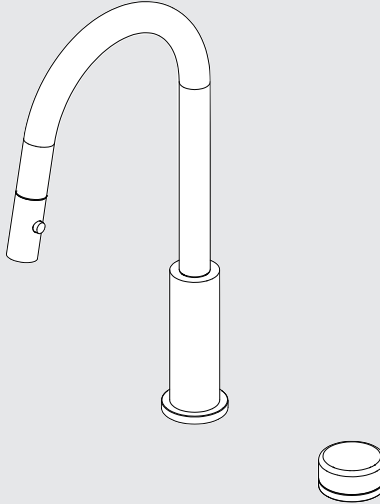


Lead Free



Versions:202506

Drawing

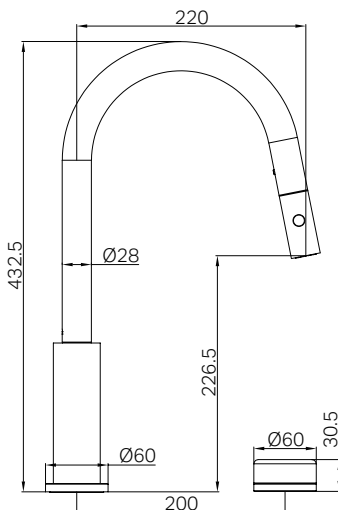

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Packaging Includes

- 1x Spout
- 1x Handwheel
- 1x Aerator Spanner
- 1x Inlet body
- 1x Stabilizer
- 1x Quick Connecting Hose
- 2x Flexible Hoses
- 1x Counterweight
- 1x Installation Kits

*Dimensions are nominal measurements only.



Chrome



Gun Metal



Brushed Bronze



Matte Black



Brushed Gold



Brushed Nickel

Serenity Progressive Pull Out Kitchen Set With Carrara Handle

24E055BZ/ 24E055BG / 24E055BN/24E055GM / 24E055MB / 24E055CH

Serenity Progressive Pull Out Kitchen Set With Verde Alpi Handle

24E056BZ/ 24E056BG / 24E056BN/24E056GM / 24E056MB / 24E056CH

Serenity Progressive Pull Out Kitchen Set With Rome Travertine Handle

24E057BZ/ 24E057BG / 24E057BN/24E057GM / 24E057MB / 24E057CH

Serenity Progressive Pull Out Kitchen Set With Arabescato Corchia Handle

24E058BZ/ 24E058BG / 24E058BN/24E058GM / 24E058MB / 24E058CH

Serenity Progressive Pull Out Kitchen Set With Metal Handle

24E060BZ/ 24E060BG / 24E060BN/24E060GM / 24E060MB / 24E060CH

Serenity Progressive Pull Out Kitchen Set With Marquina Black Handle

24E137BZ/ 24E137BG / 24E137BN/24E137GM / 24E137MB / 24E137CH

Installation Instruction

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE:


- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.
- The marble stone hand wheel crafted from natural marble. Each handle boasts unique variations in color, veining, and texture, making every piece one of a kind.


MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Avoid contact with highly pigmented substances such as red wine, coffee and ink, as they may cause permanent staining.


FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

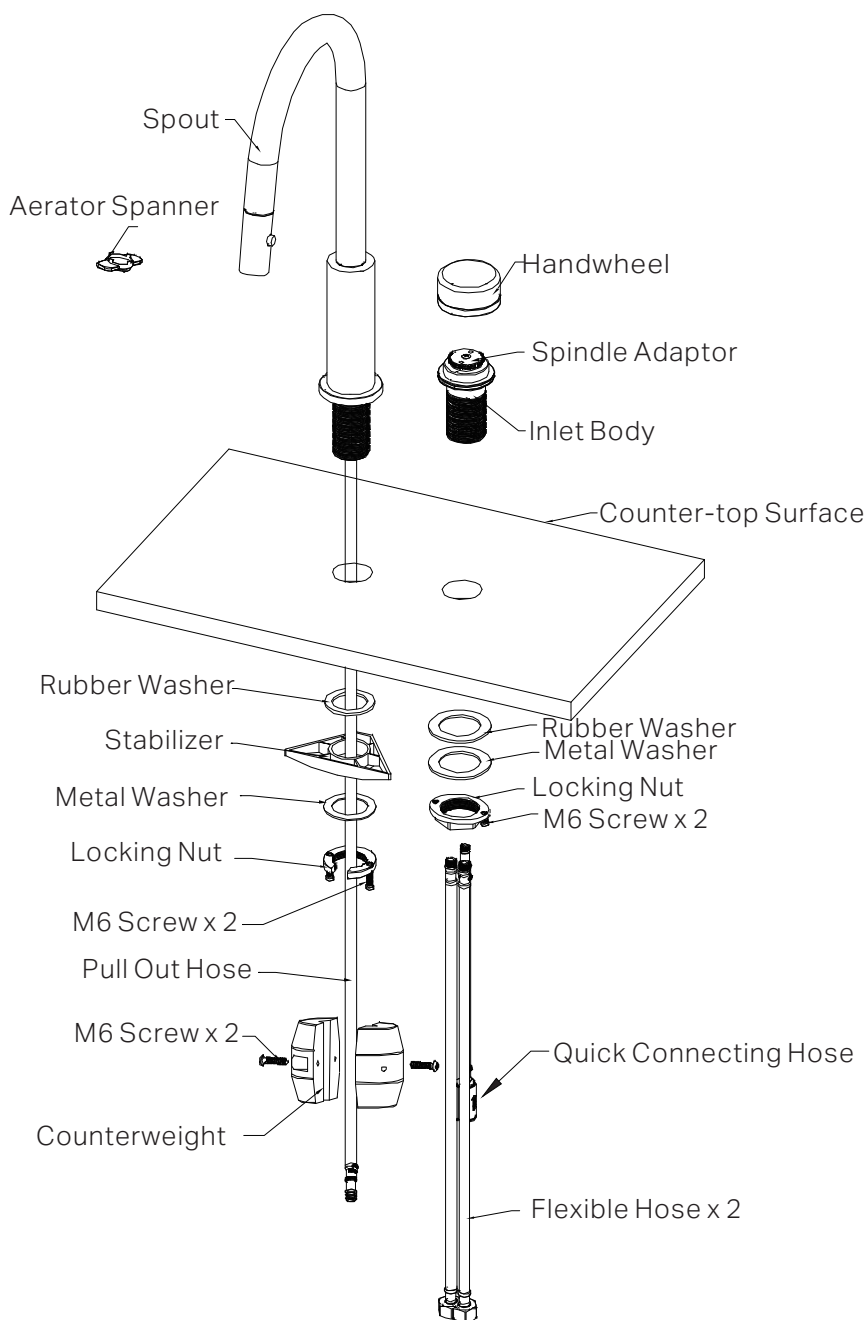

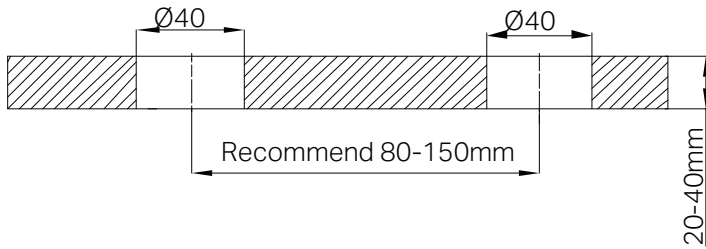

1. Ensure the counter-top hole dimensions meet the specifications (two Ø40mm diameter holes, with a counter-top thickness from 20- 40mm).

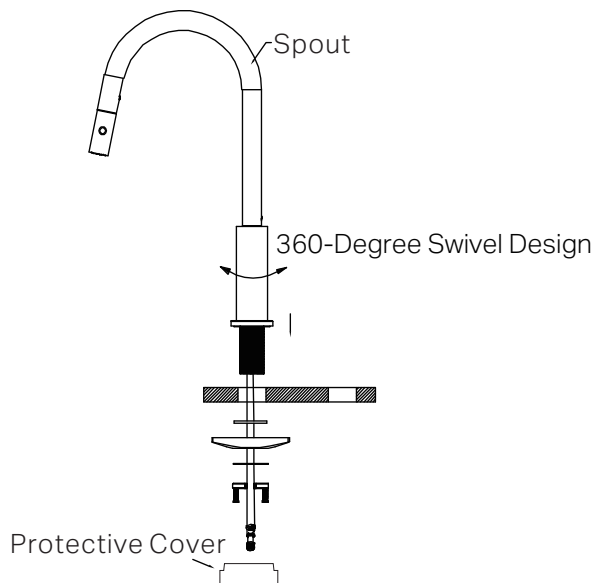


2. Remove the protective cover.

Insert the spout and pull-out hose through the mounting hole on the left-hand side of the benchtop.

Place the rubber washer, followed by the metal washer, over the spout.

If required, add the stabilizer between the rubber washer and metal washer.


Secure the spout to the benchtop using the locking nut and tighten it with the two provided M6 screws. Avoid overtightening to prevent damage.

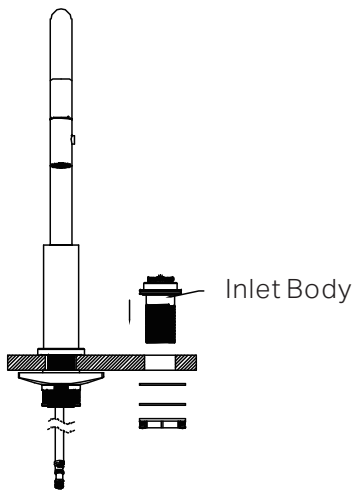

3. Remove the locking nut, metal washer, and rubber washer from the inlet body.

Insert the inlet body through the mounting hole on the right-hand side of the benchtop.

Reattach the rubber washer, metal washer, and locking nut, securing the inlet body with the two M6 screws.

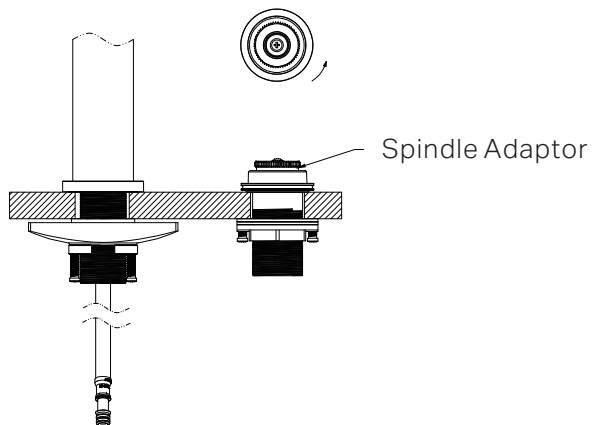

4. Apply lubrication evenly to the O-Ring. Refer to the diagram to identify the correct O-Ring position. Ensure the O-Ring is well-lubricated to prevent damage during installation.


For Metal Handwheels:

Rotate the spindle adaptor counterclockwise to its fully closed position.

Refer to the diagram for clarification.

For Marble Handwheels:

No adjustment to the spindle adaptor is necessary.

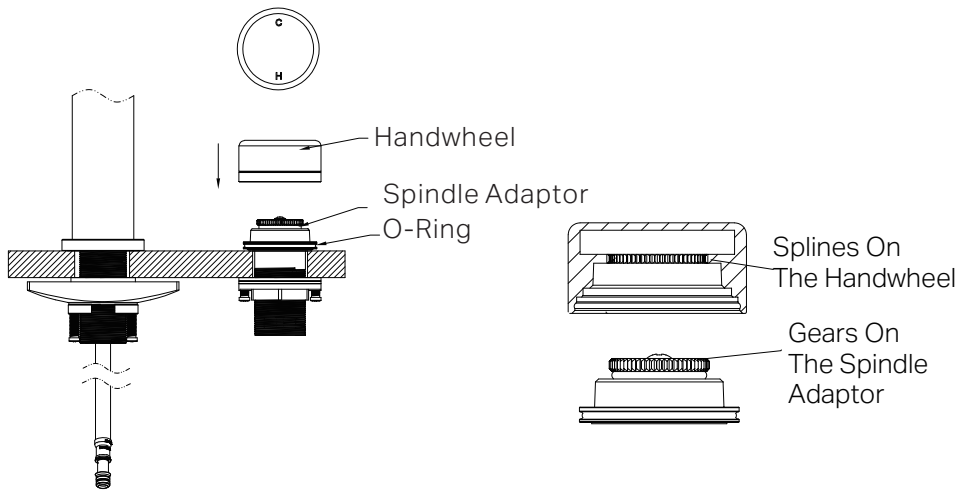

5. Align the Handwheel with the Spindle Adaptor:


Ensure the spline on the underside of the handwheel align perfectly with the gears on the spindle adaptor, as shown in the above diagram. This alignment is crucial for proper functionality.

Secure the Handwheel:


Once aligned, press the handwheel down firmly onto the spindle adaptor.

Tip:


For metal handwheels, ensure the handwheel installed as shown in above on the diagram.

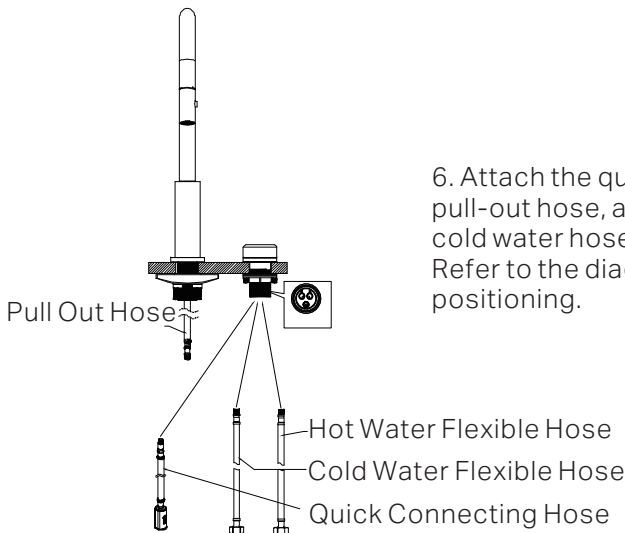

6. Attach the quick-connecting hose, pull-out hose, and flexible hot and cold water hoses to the inlet body. Refer to the diagram for proper positioning.

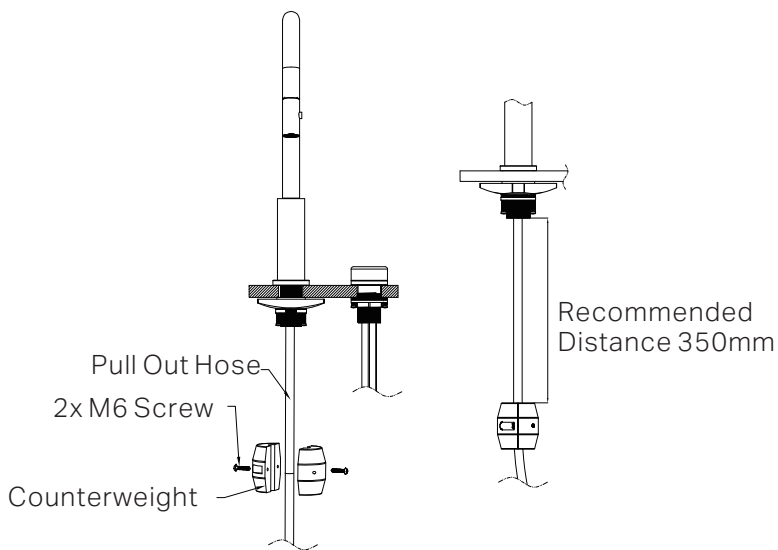

7. Secure the counterweight to the pull-out hose using the provided screws. Maintain a recommended distance of 350mm from the inlet body threads, as indicated in the diagram.

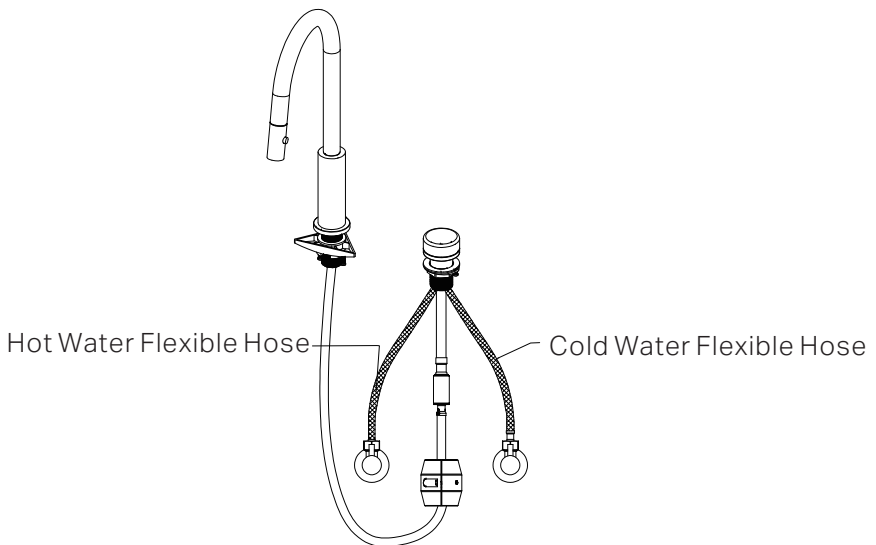

8. Connect the hot and cold water flexible hoses to the respective water supply valves.

Hand-tighten the connections to avoid thread damage, ensuring they are secure.

9. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.

Note: For marble handwheel models, no hot or cold markings are applied.

3170861

Nero

