







CLOSE COUPLE TOILET

Signature Hygiene Rim CCBTW - Bottom Inlet with Std
Seat AS01023


Installation Manual




American Standard

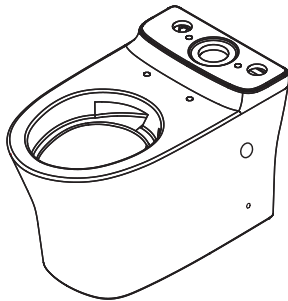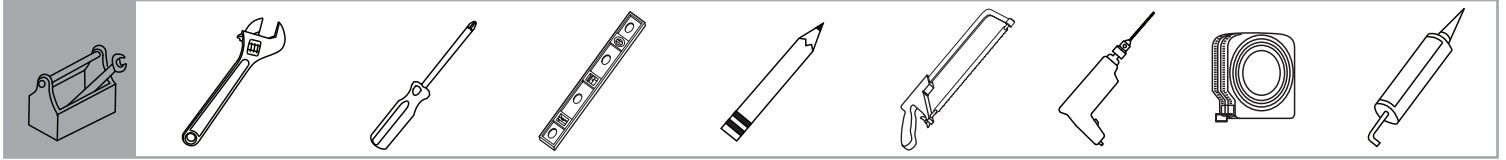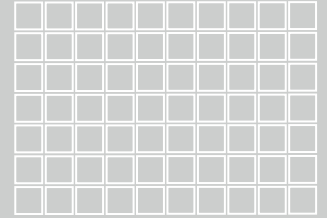

x1

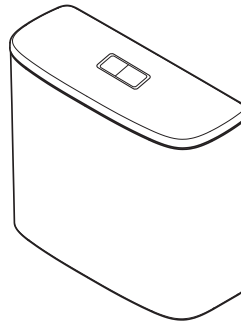

x1

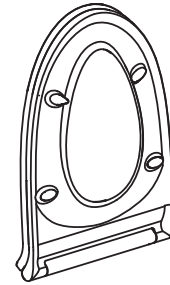

x1



x1



x1







x1



x1




x1

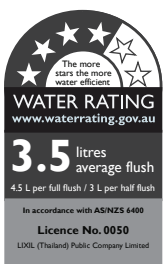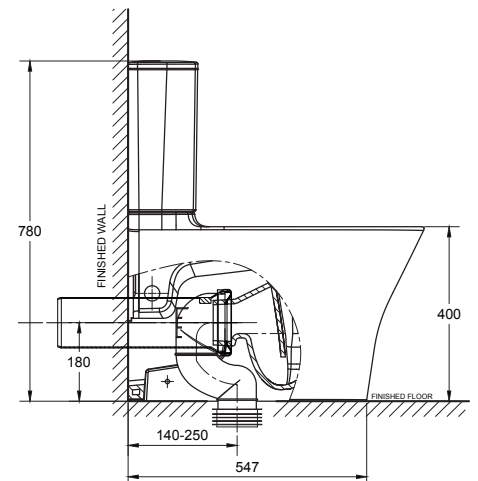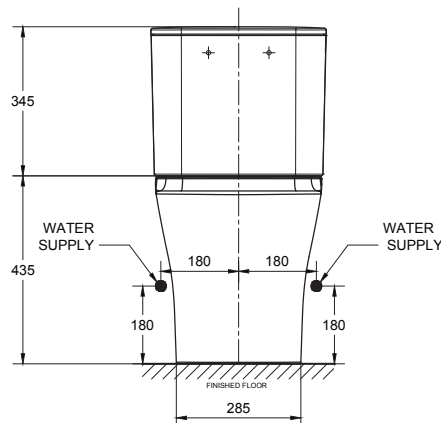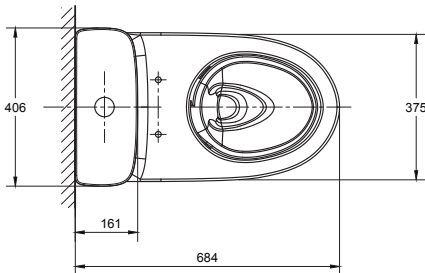





1

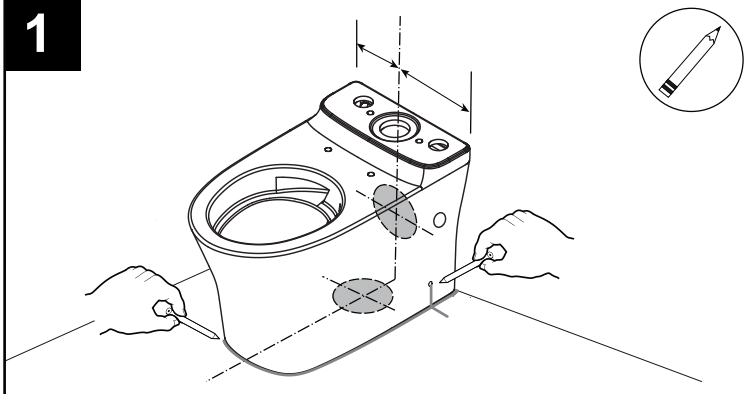


2

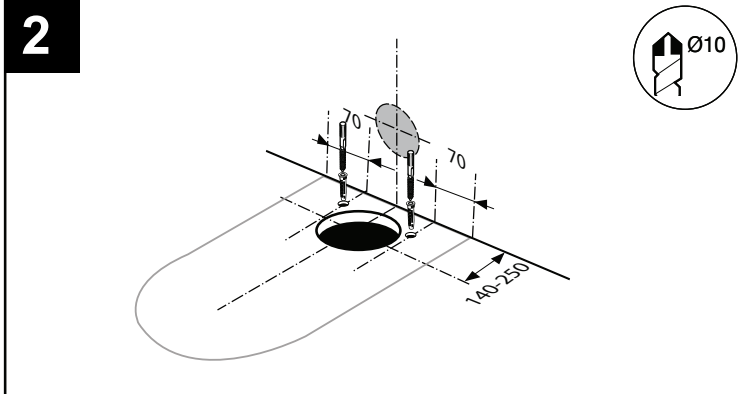


3

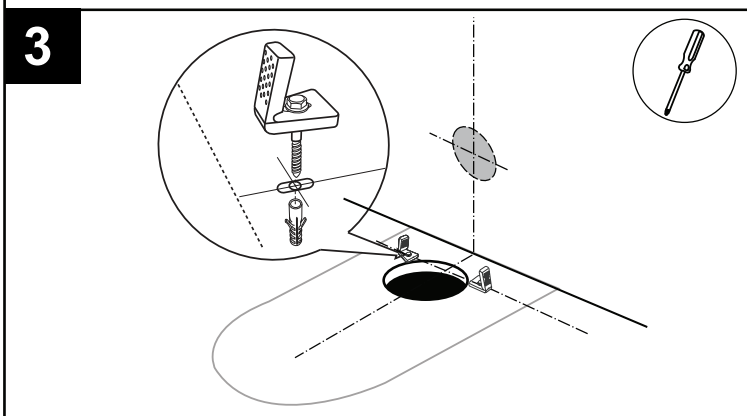

4

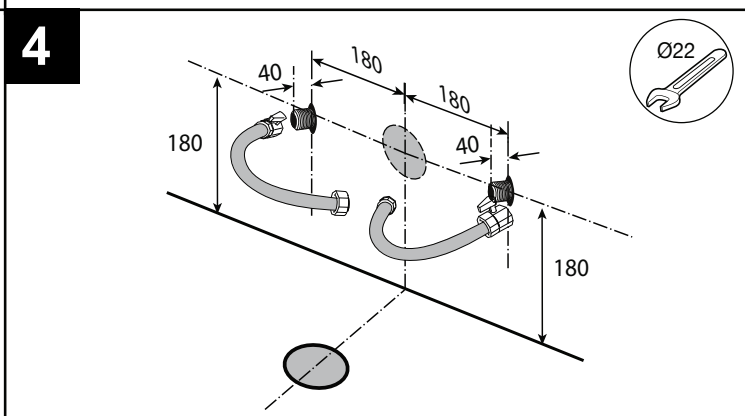


5a

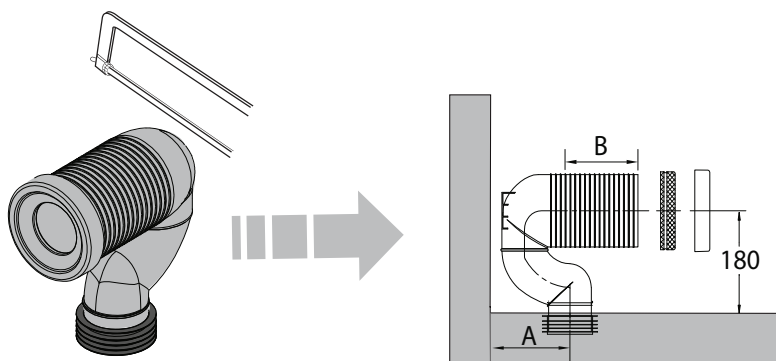


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)
140-150 mm.	50 mm.
151-159 mm.	60 mm.

5b

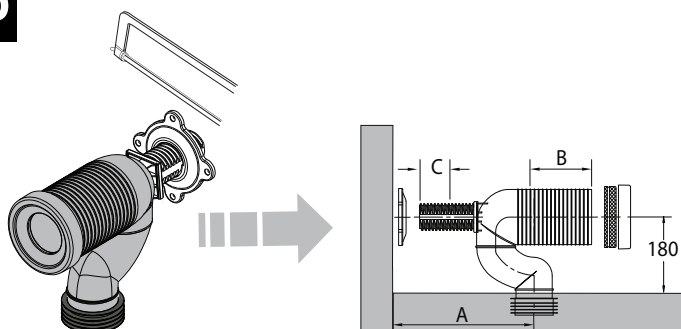









ROUGHING - IN (A)	CONNECTOR CUTOUT (B)	ROUGHING-IN (A)	CONNECTOR CUTOUT (B)
160-170 mm.	70 mm.	211-220 mm.	120 mm.
171-180 mm.	80 mm.	221-230 mm.	130 mm.
181-190 mm.	90 mm.	231-250 mm.	150 mm.
191-200 mm.	100 mm.		
201-210 mm.	110 mm.		C=116 - (A-160)

6a

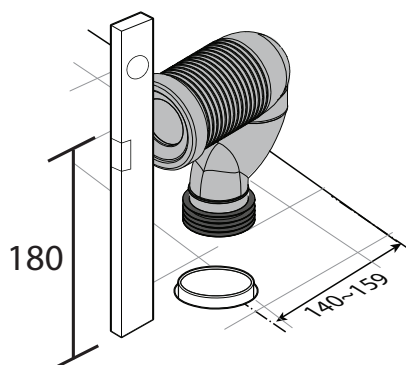

6b

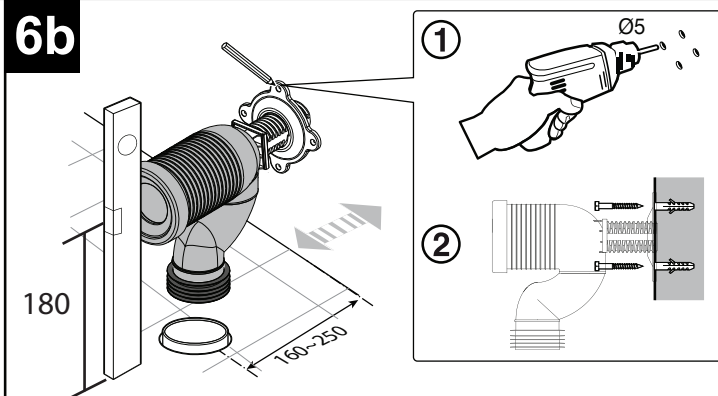

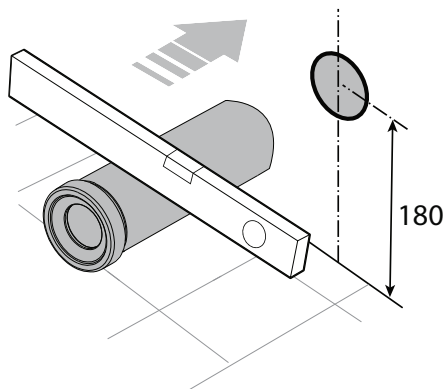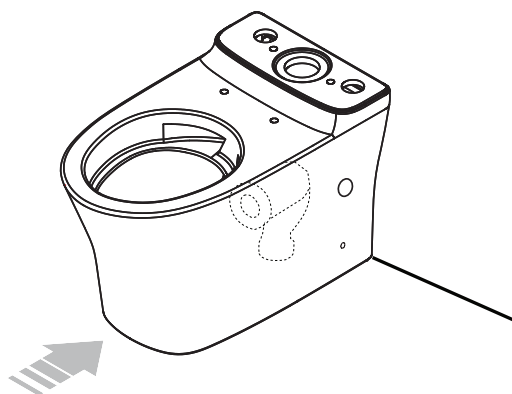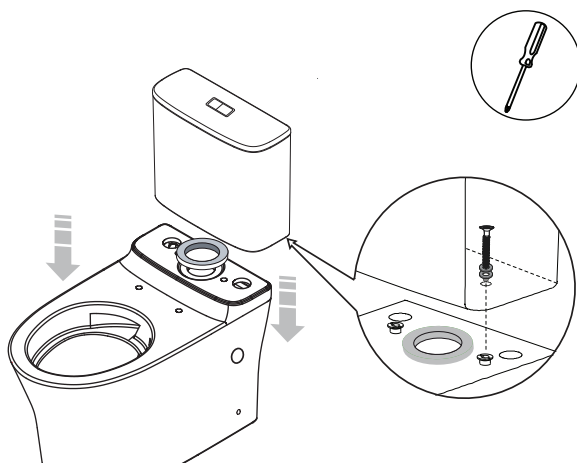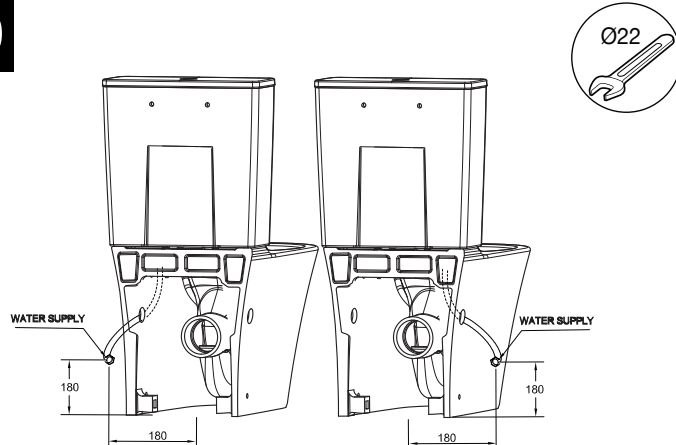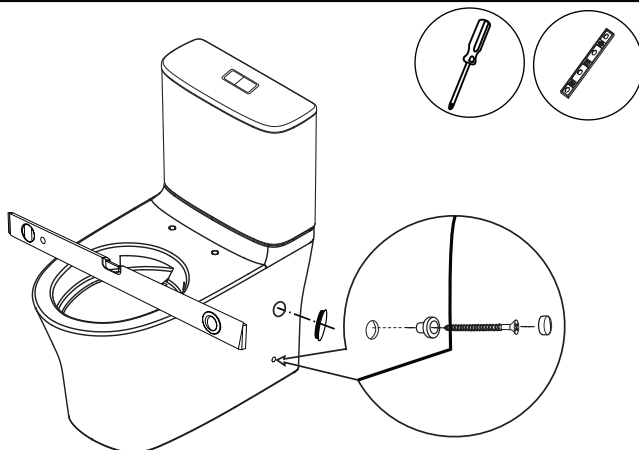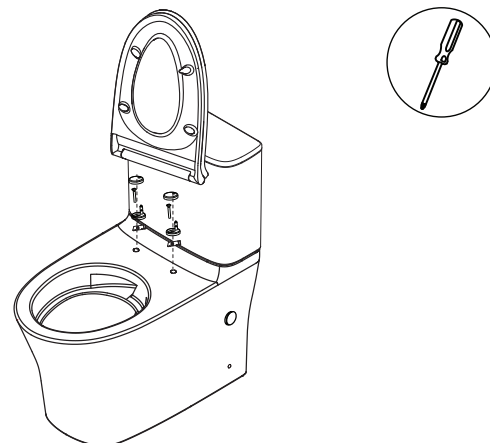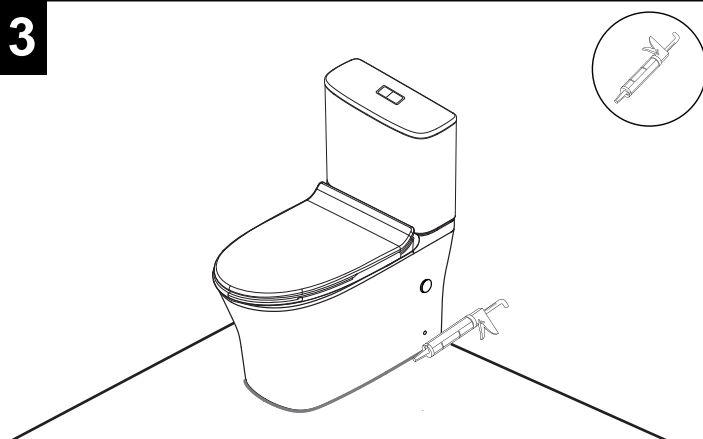**7****8****9****10****11****12****13****14**

IMPORTANT

Before turning on water supply check:


1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

Now fill cistern and recheck water level:










4. Check carefully for leaks
5. Test the cistern flushes

SIGNATURE SEAT & COVER
CL6155M-6D

American Standard

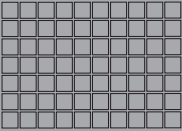

Seat and Cover Installation Manual

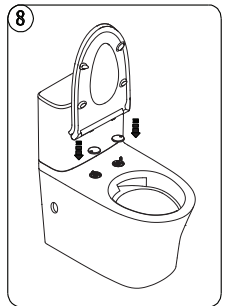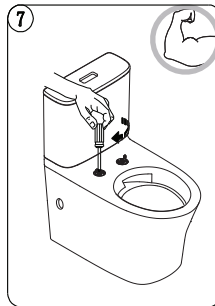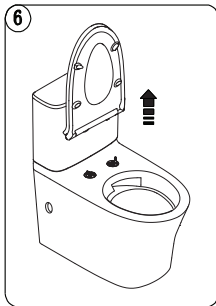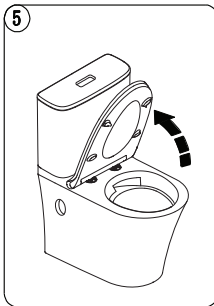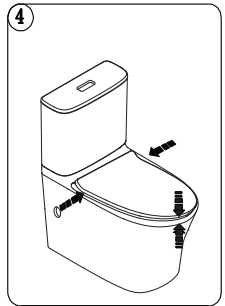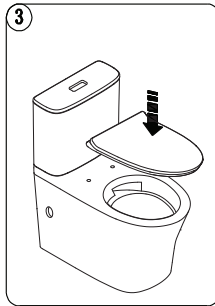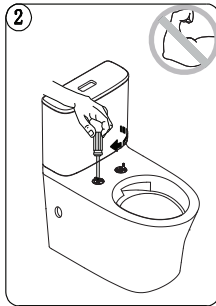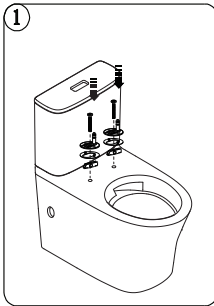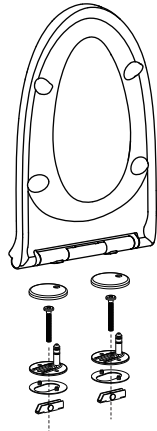

Warning: Do not stand or place heavy objects on the seat cover. Do not use inappropriate cleaners (toilet cleaner, residential cleaner, bleach, benzene, paint thinner, cleaning powder, cresol or any other strong acid and strong alkali, ect corrosive solution) to clean the seat cover or hinge base. Wipe seat and cover with the wet and soft cloth that is wrung dry. Keep children out of the seat, to avoid body injury. Do not open/close the seat and cover using excessive force. Do not expose the product to direct sunlight.

Note: The hole at back of the seat cover is for the production process constraint, not a defect