







CLOSE COUPLE TOILET

Heron Hygiene Rim CCBTW - Bottom Inlet AS01041


Installation Manual




American Standard

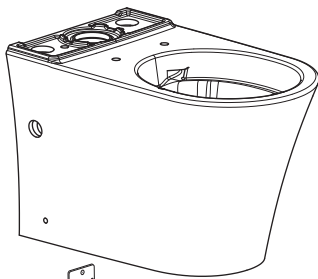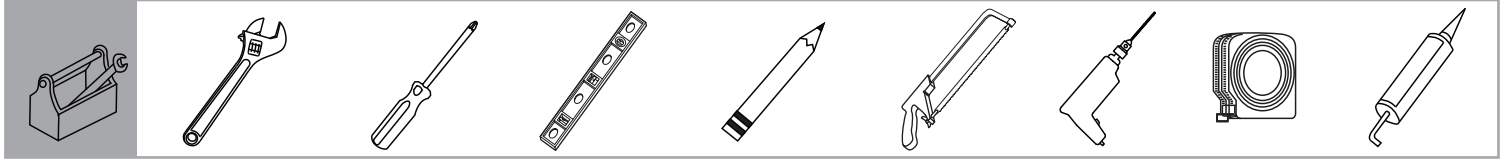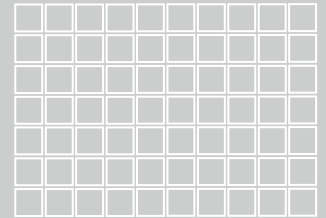


x1

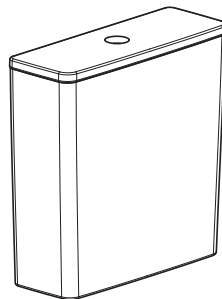

x1

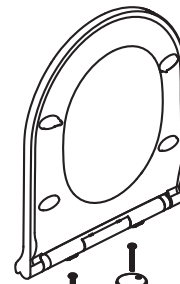

x1

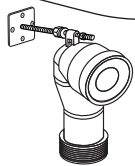

x1



x1







x1



x1




x1

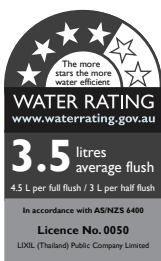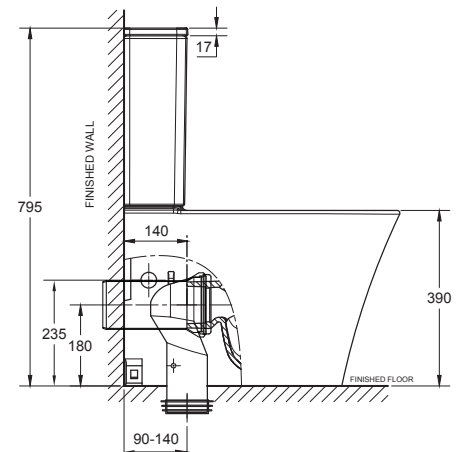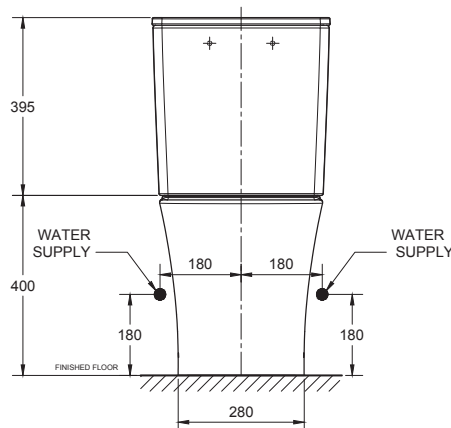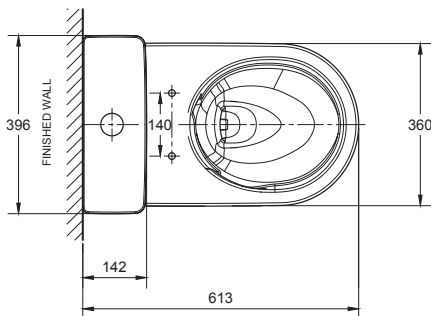





1

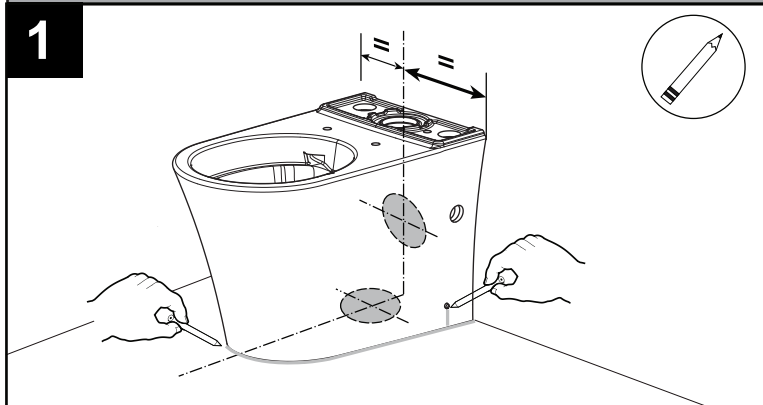


2

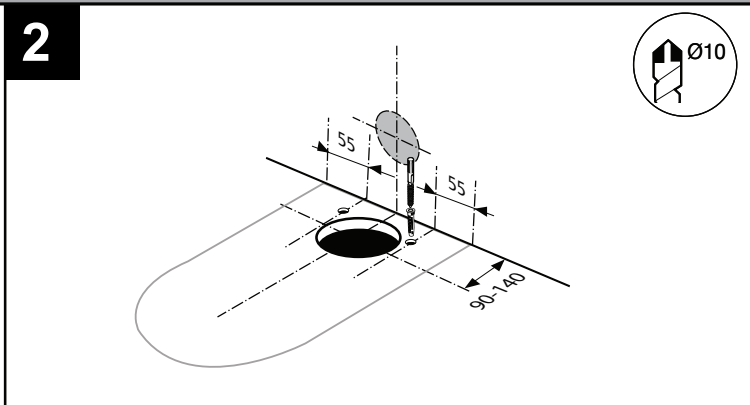


3

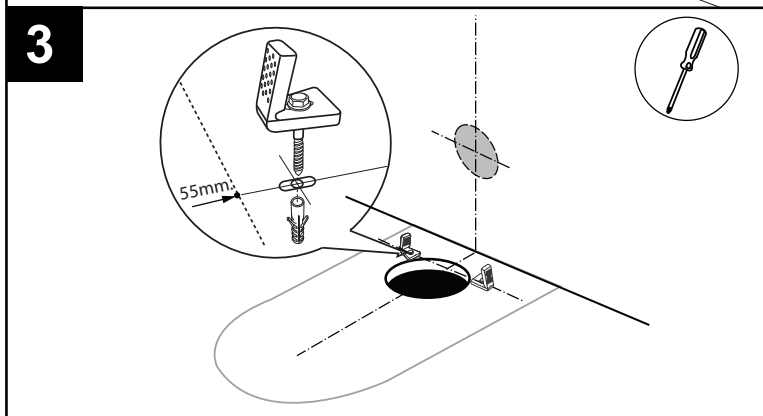


4

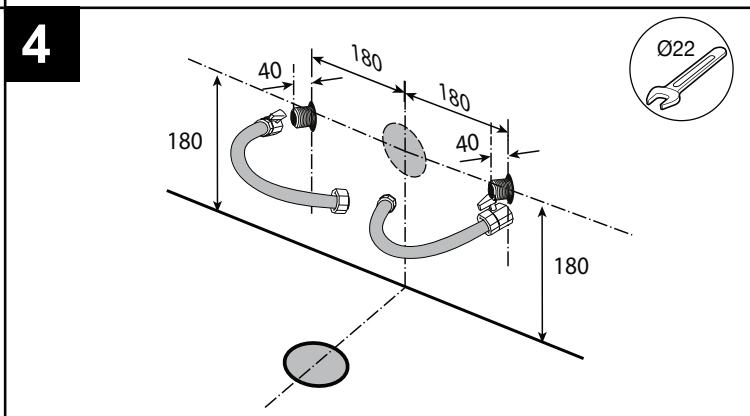


5

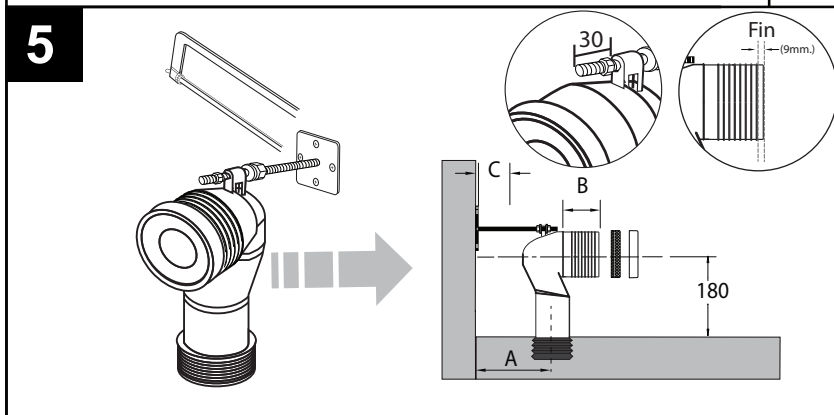


6

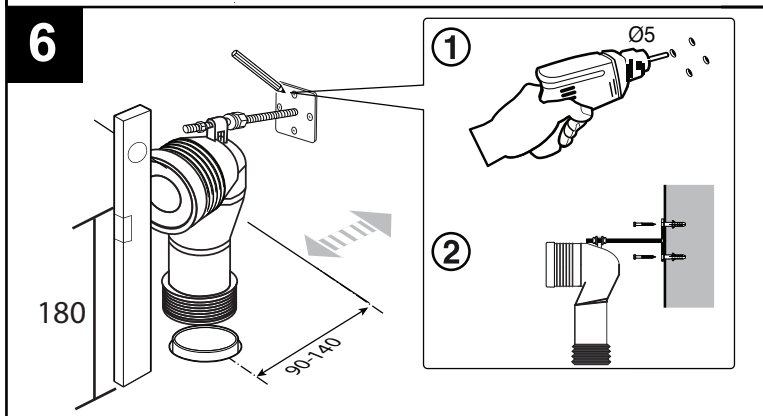


7





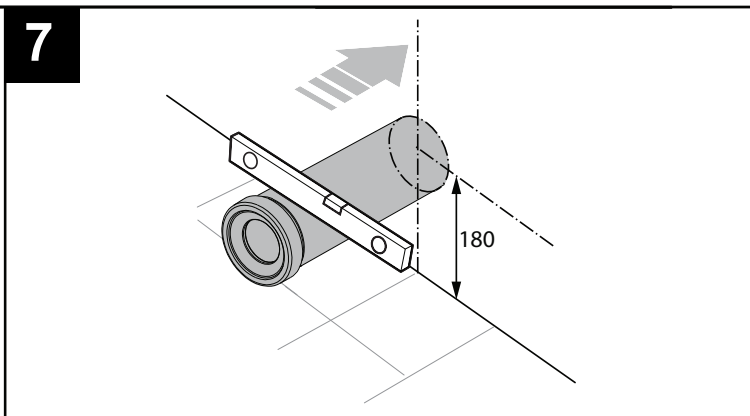


8

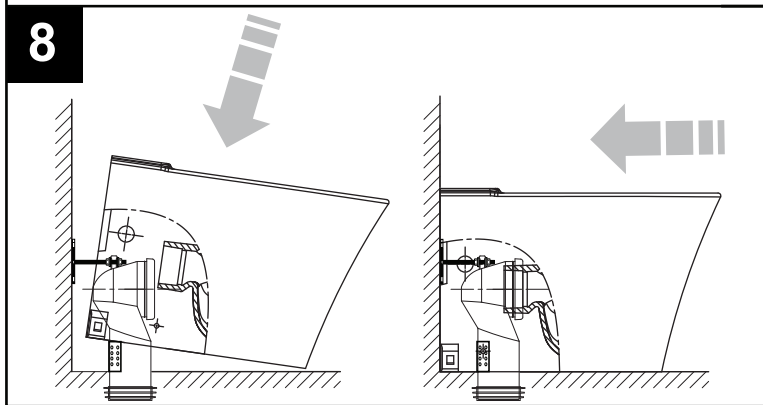

9

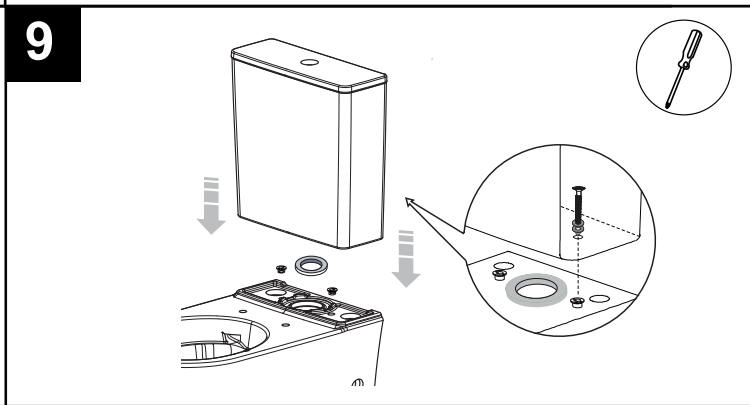

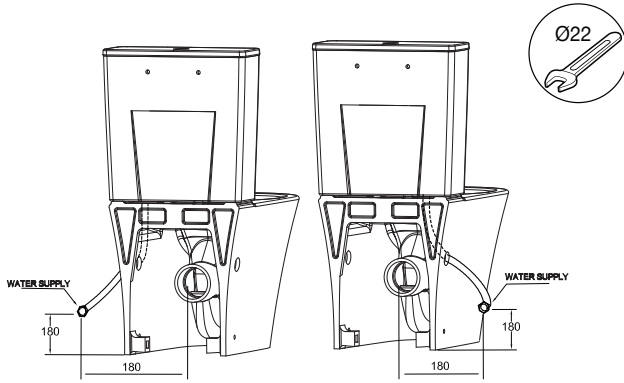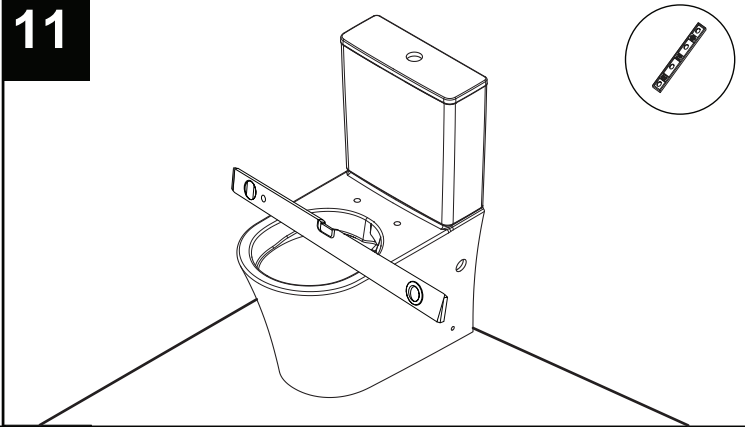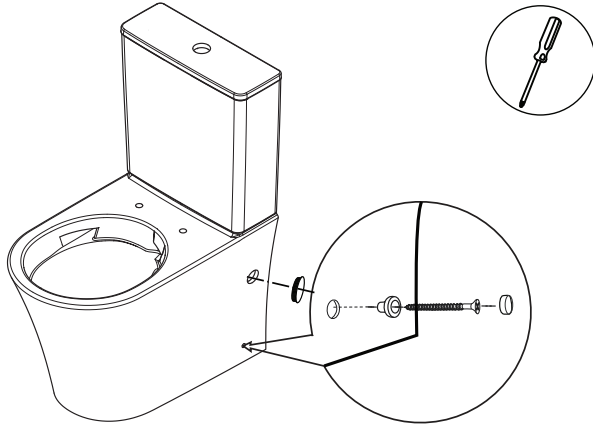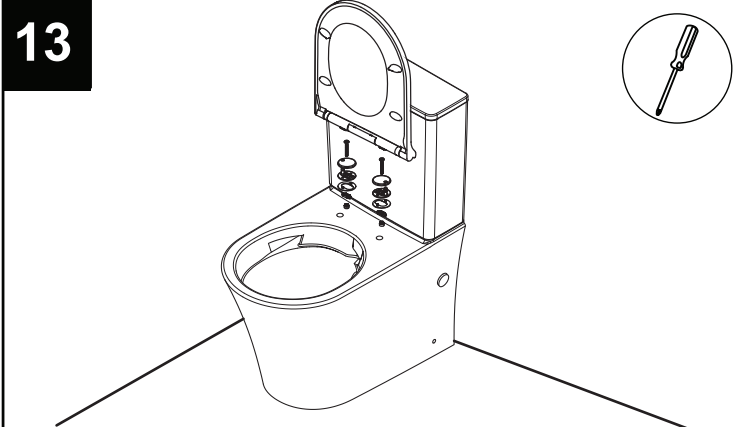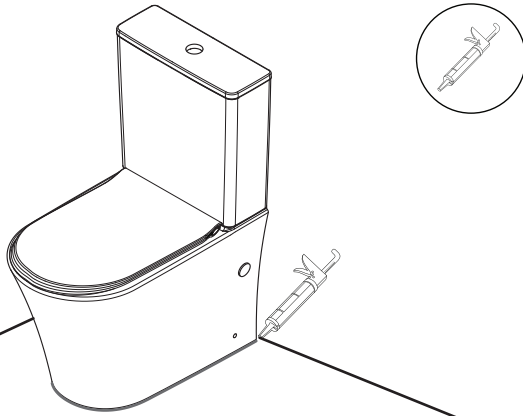**10****11****12****13****14****15**

IMPORTANT

Before turning on water supply check:

1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

Now fill cistern and recheck water level:

4. Check carefully for leaks
5. Test the cistern flushes

