







CLOSE COUPLE TOILET

Heron Hygiene Rim CCBTW - Back Inlet AS01042


Installation Manual




American Standard

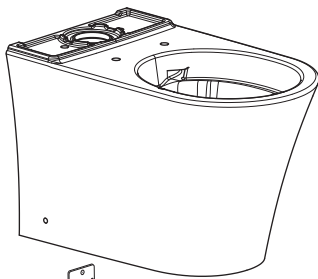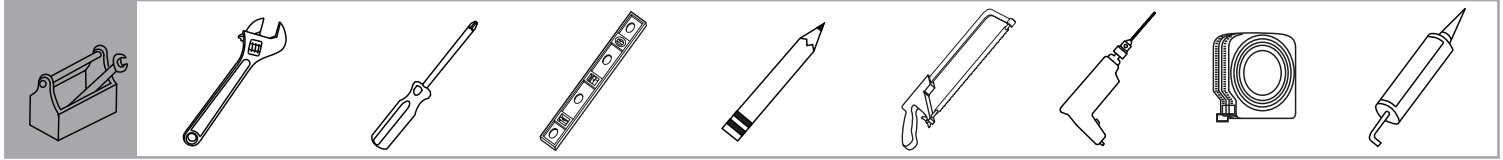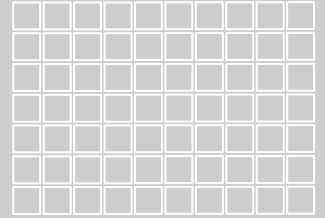


x1

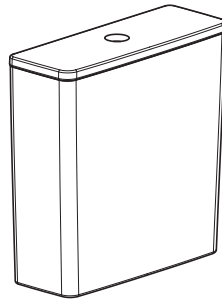

x1

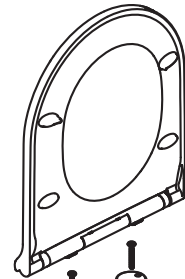

x1

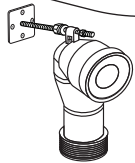


x1



x1







x1



x1




x1

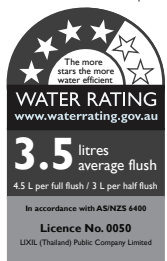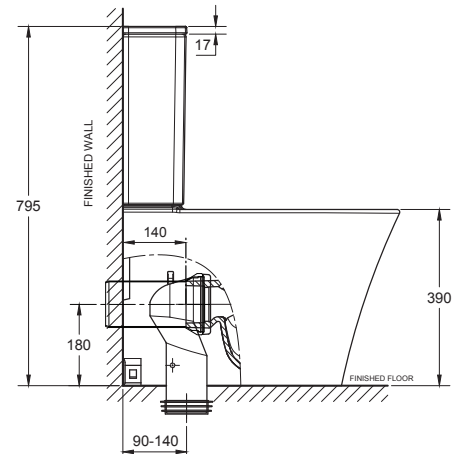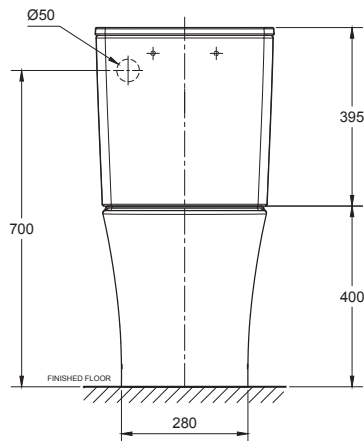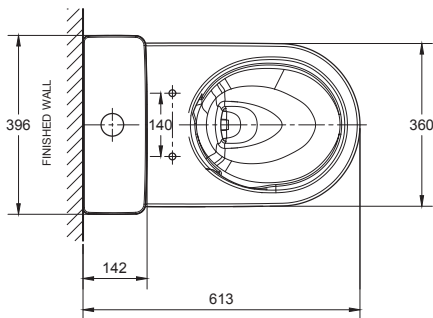





1

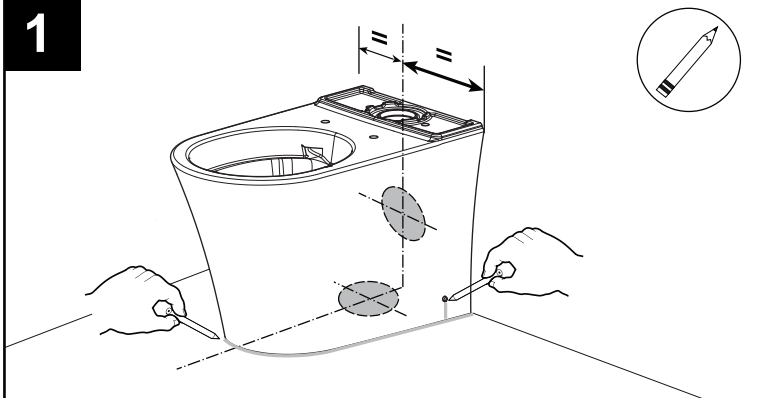


2

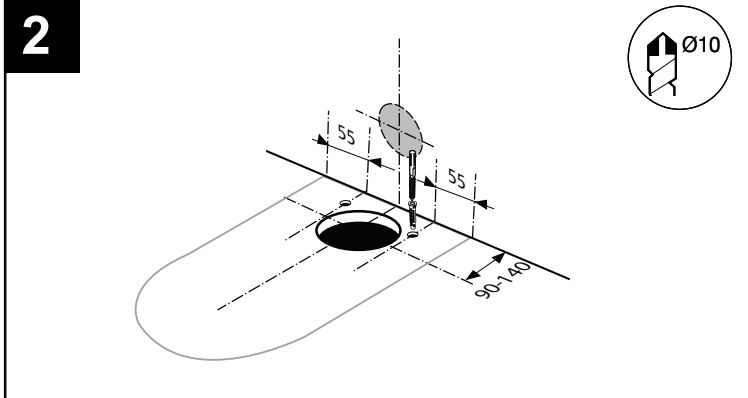


3

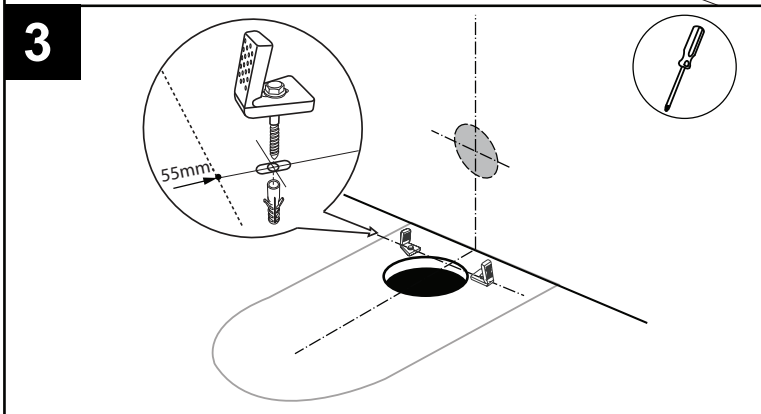

4

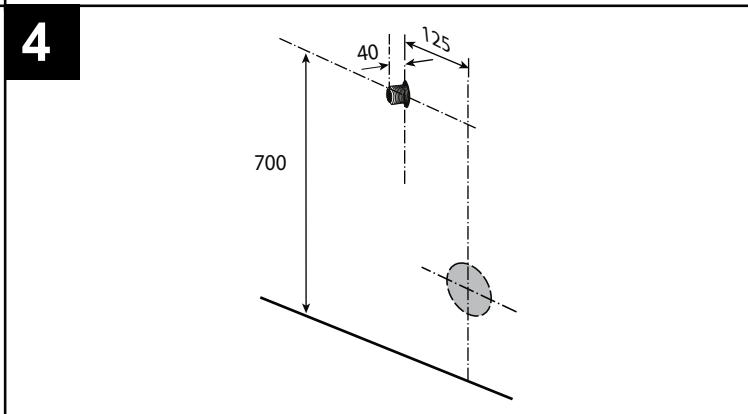


5

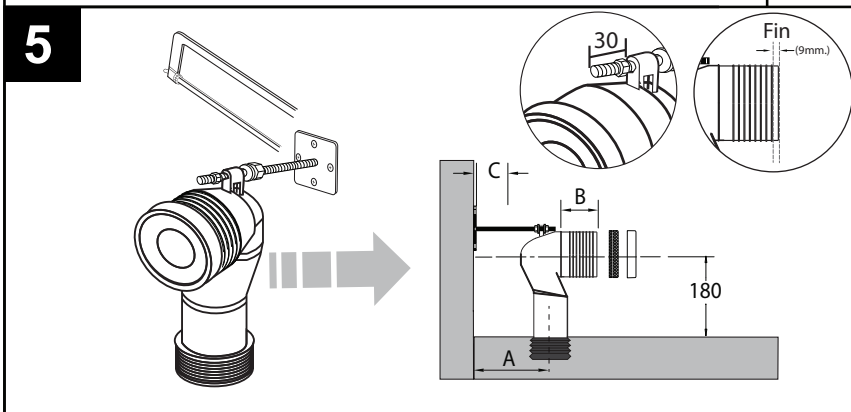


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)	STUD CUT OUT (C)
90 mm.	-	170 mm.
100 mm.	10 mm.	160 mm.
110 mm.	20 mm.	150 mm.
120 mm.	30 mm.	140 mm.
130 mm.	40 mm.	130 mm.
140 mm.	50 mm.	120 mm.


6

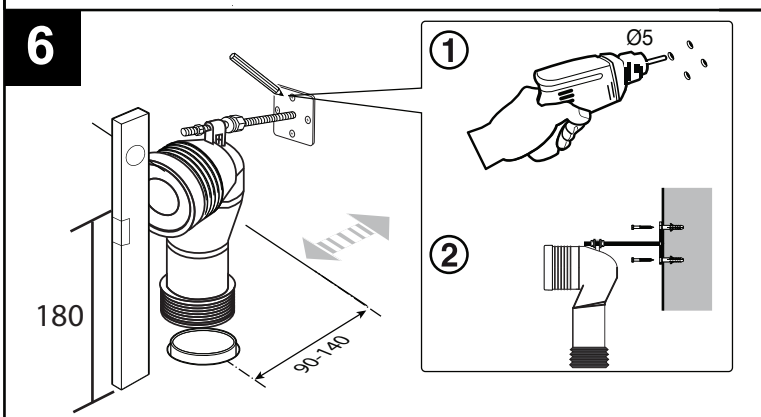


7

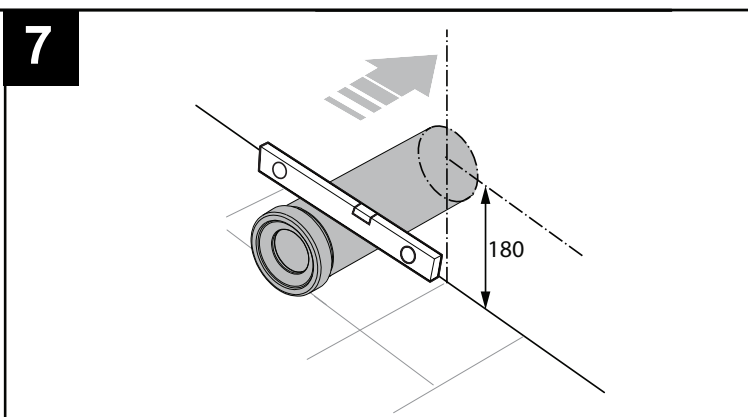

8

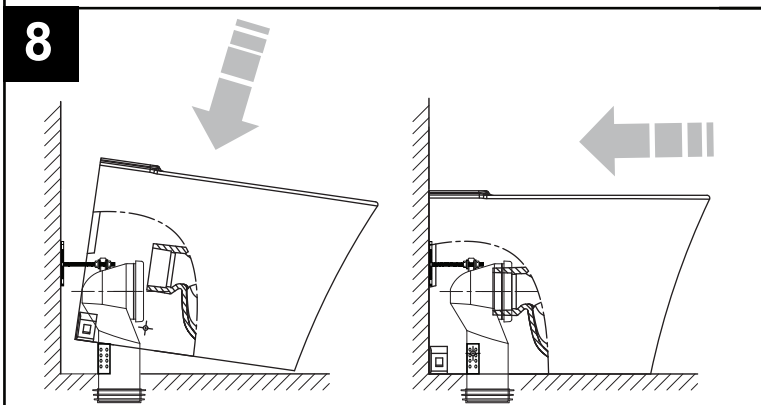


9

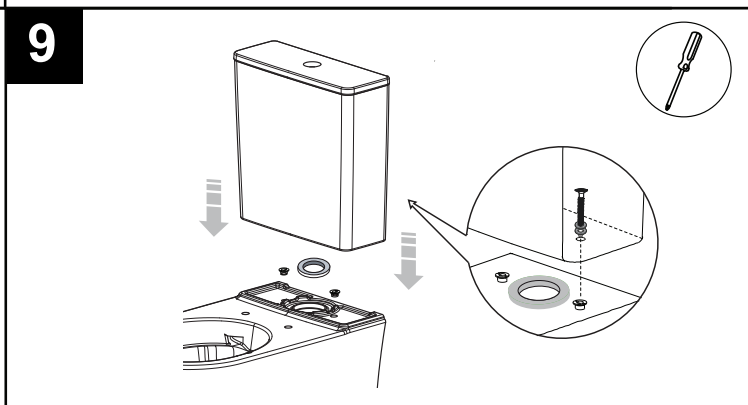




10

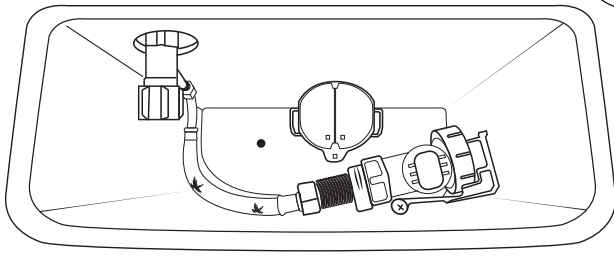


Ø22


11

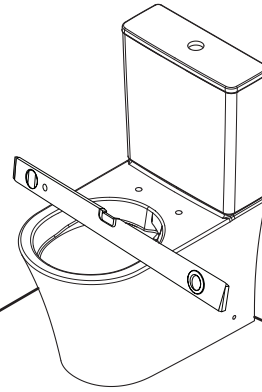


12

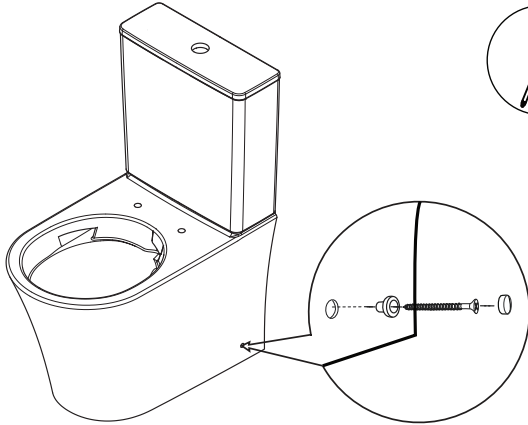

13

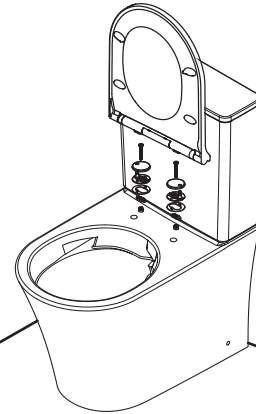

14

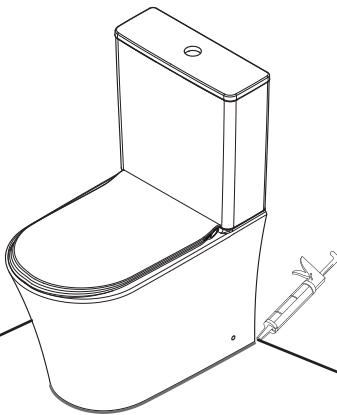

15

IMPORTANT

Before turning on water supply check:

1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

Now fill cistern and recheck water level:

4. Check carefully for leaks
5. Test the cistern flushes

