

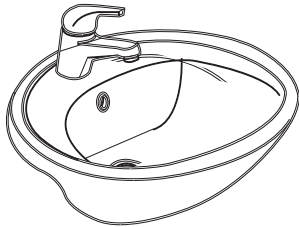








**Studio 500 Semi
Recessed Basin - I Tap
Hole Overflow - Inc
Fixing Kit AS02006**




American Standard

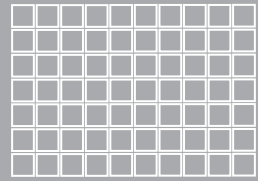



— x1

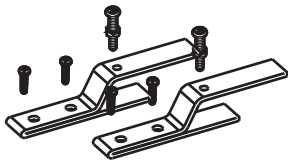

— x1

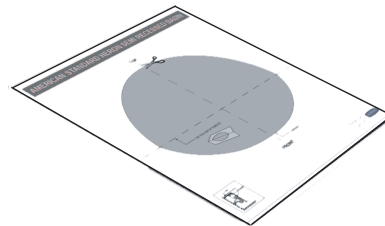


x1

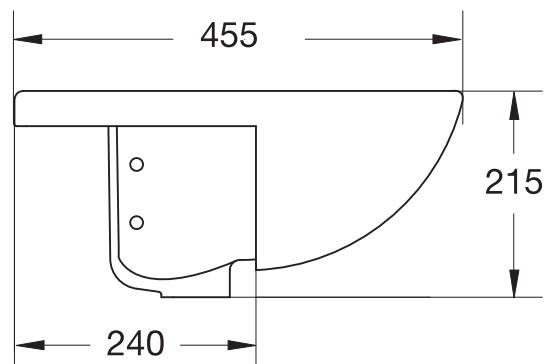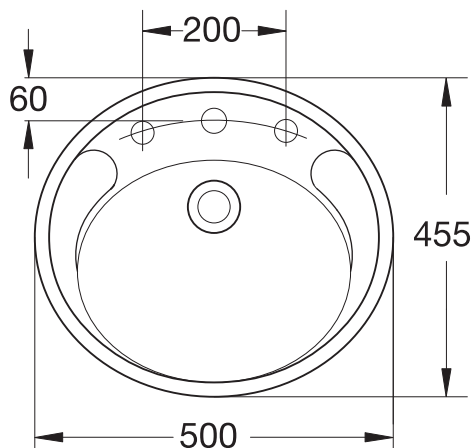




1

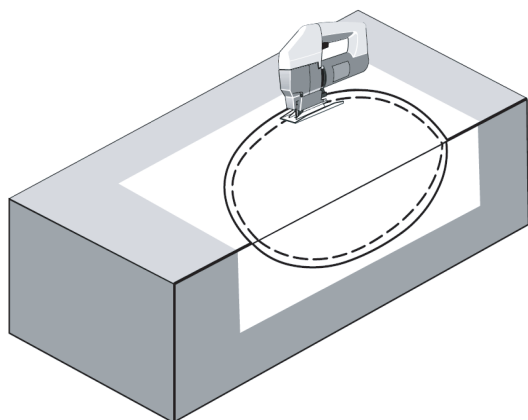

2

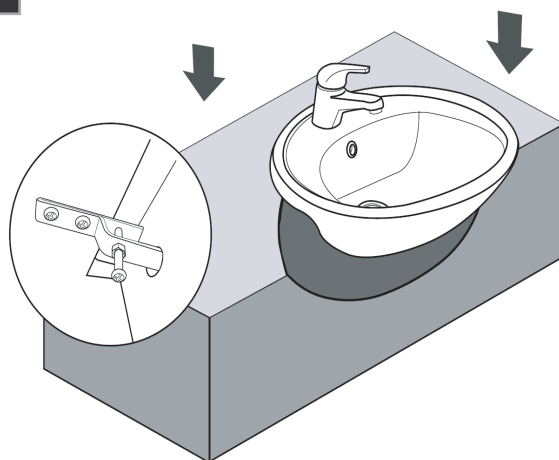

3

