

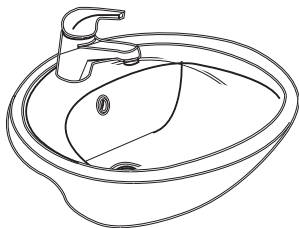







**Studio 500 Semi
Recessed Basin - 3 Tap
Hole Overflow - Inc
Fixing Kit AS02007**




American Standard

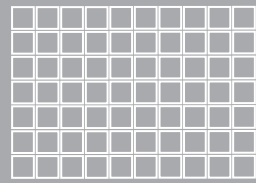



— x1

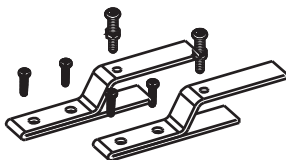

— x1

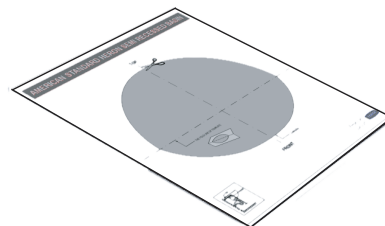


x1

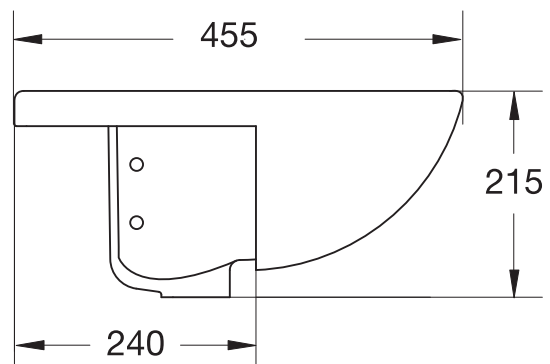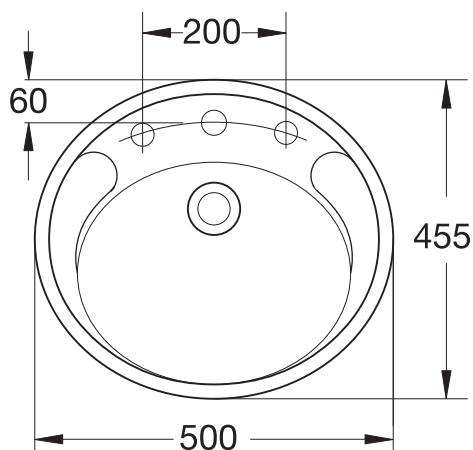




1

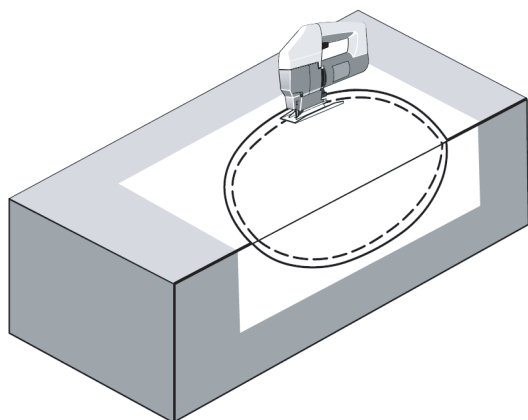

2

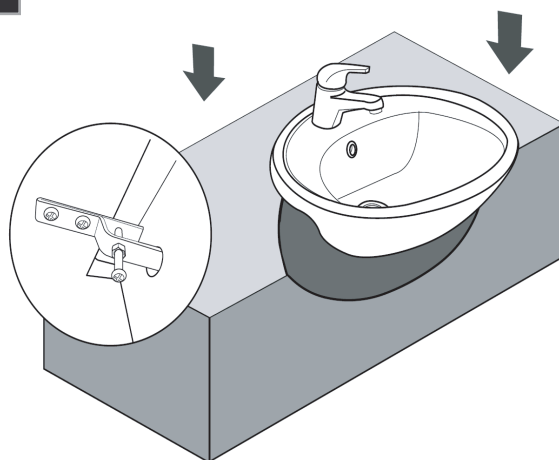

3

