


Bianca Metal Shower Shelf


Nero

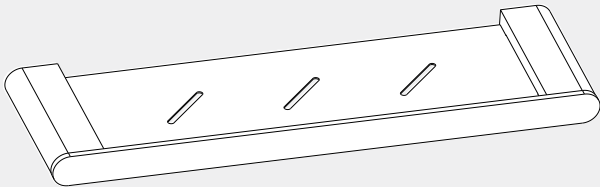

Versions:202506



Drawing

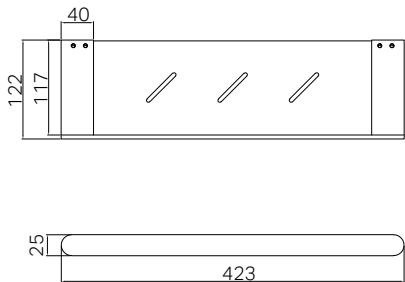







Features

- 304 grade stainless steel construction for durability

Packaging Includes

- 1x Metal Shower Shelf
- 1x Fixing Kit

Finish & SKU

 Chrome NR9087aCH	 Gun Metal NR9087aGM	 Brushed Nickel NR9087aBN
 Matte Black NR9087aMB	 Brushed Gold NR9087aBG	 Brushed Bronze NR9087aBZ

*Dimensions are nominal measurements only.


Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS


- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.

MAINTENANCE AND CARE


- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

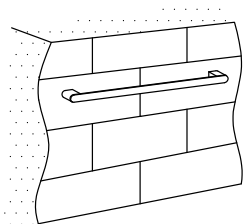


1. Place the accessories in the desired installation position. Use a level to ensure the accessories is horizontal. Mark the positions directly below the bases with a marking pen.

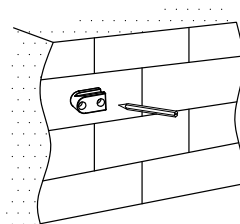


2. Position the fixing blocks at the marked spots. Mark the drilling points through the fixing block holes.

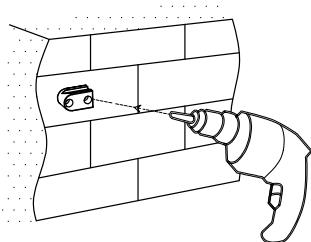


3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

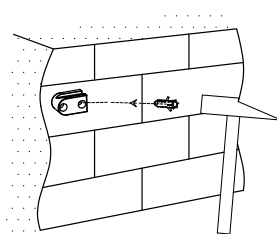

4. Insert the expansion plugs into the drilled holes using a hammer.

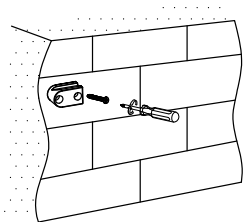

5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

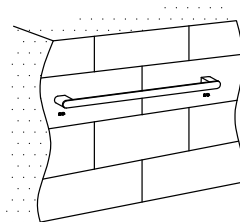

6. Install the accessories by tightening the grub screws.