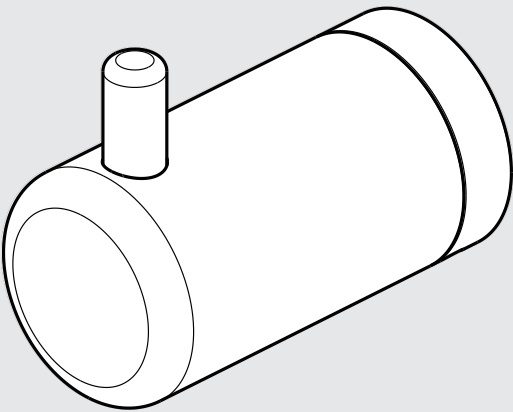


Mecca Care 25mm Wall Hook

Nero

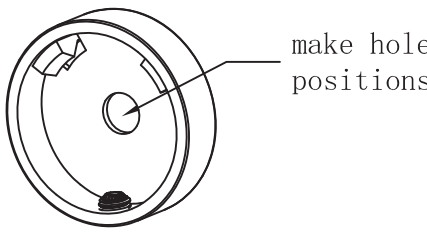
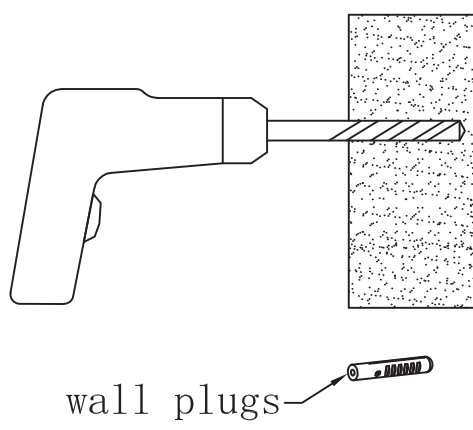
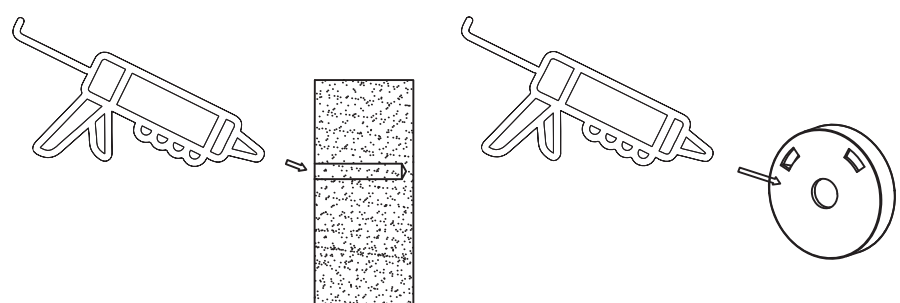
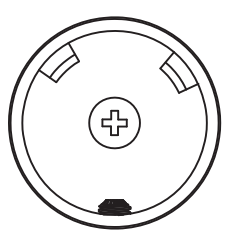
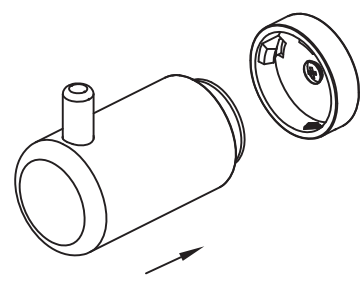
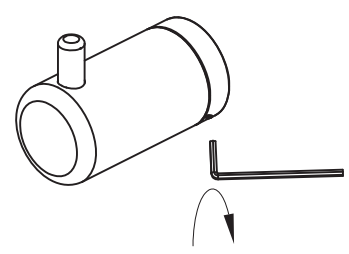
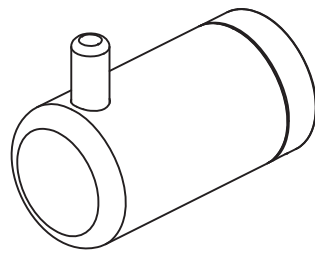


Versions:202506

Drawing	Specifications	Features					
	SKU NRCR2582	1. Australian owned and designed. 2. Gun metal, brushed gold and brushed bronze colours are PVD coated for long term durability.					
	Finish <table><tr><td> Chrome NRCR2582CH</td><td> Gun Metal NRCR2582GM</td><td> Brushed Bronze NRCR2582BZ</td></tr><tr><td> Matte Black NRCR2582MB</td><td> Brushed Gold NRCR2582BG</td><td> Brushed Nickel NRCR2582BN</td></tr></table>	Chrome NRCR2582CH	Gun Metal NRCR2582GM	Brushed Bronze NRCR2582BZ	Matte Black NRCR2582MB	Brushed Gold NRCR2582BG	Brushed Nickel NRCR2582BN
Chrome NRCR2582CH	Gun Metal NRCR2582GM	Brushed Bronze NRCR2582BZ					
Matte Black NRCR2582MB	Brushed Gold NRCR2582BG	Brushed Nickel NRCR2582BN					

*Dimensions are nominal measurements only.

Installation Instruction

	<p>1. Locate wall studs, install into stud. Place wall seal/mounting bracket on wall at correct height over centre of stud and mark hole positions on wall.</p>
	<p>2. Drill pilot holes into wall stud approximately 60mm deep to suit mounting screws (and wall plugs if required).</p> <p>Tip: 4mm hole for screws into timber or 10mm hole for wall plugs.</p>
	<p>3. Apply small amount of silicon to mounting bracket and wall in and around the screw hole.</p>
	<p>4. Install mounting bracket by screwing onto wall.</p> <p>Tip: Use appropriate mounting screws for the wall stud material, supplied screws are for timber wall stud.</p>
	<p>5. Push wall hook onto wall bracket.</p>
	<p>6. Tighten grub screws with allen key.</p>
	<p>7. Finished.</p>

Nero



MECCA CARE
ASSISTED LIVING 25MM

