


Zen SS316L

Double Towel Rail

600mm

Nero



Versions:202405


Drawing	Features	Packaging Includes
	<ul style="list-style-type: none">- 316L grade stainless steel construction for durability- Customizable length- Easy to install	<ul style="list-style-type: none">1x Double Towel Rail 600mm1x Fixing Kit
Finish & SKU		
Brushed Bronze NR1624dBZ		
Brushed Gold NR1624dBG	Graphite NR1624dGR	Brushed Nickel NR1624dBN

*Dimensions are nominal measurements only.


Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS


- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

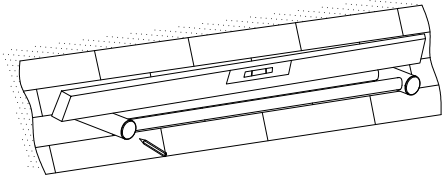


1. Place the towel rail in the desired installation position.
Use a level to ensure it is horizontal.
Mark the positions directly below the bases with a marking pen.

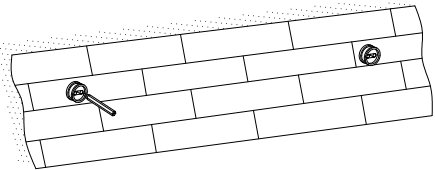


2. Position the fixing blocks at the marked spots.
Mark the drilling points through the fixing block holes.

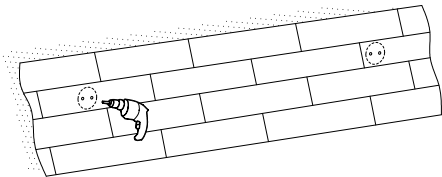


3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

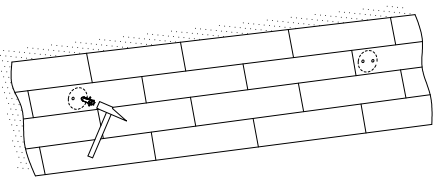

4. Insert the expansion plugs into the drilled holes using a hammer.

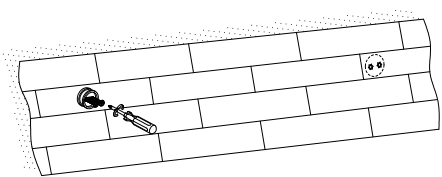


5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

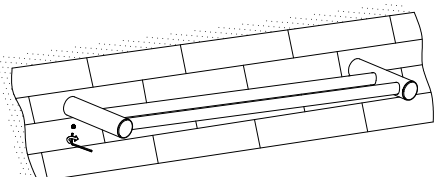


6. Install the towel rail onto the fixing blocks.
Tighten the grub screws into the base to secure it tightly and firmly against the fixing blocks.

OPTIONAL CUSTOMIZATION:


If required, the right side of the towel rail can be shortened to fit your bathroom.

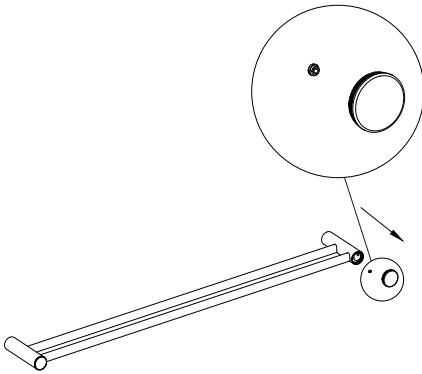

1. Detach the end cap from the right side of the towel rail. Loosen the grub screw holding the rail in place.

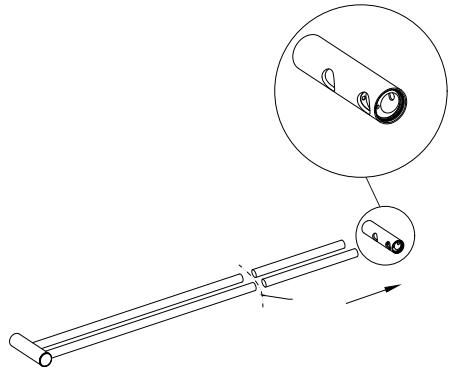

2. Use a hacksaw or pipe cutter to cut the towel rail to the desired length, then deburr the end with a file or grinder.

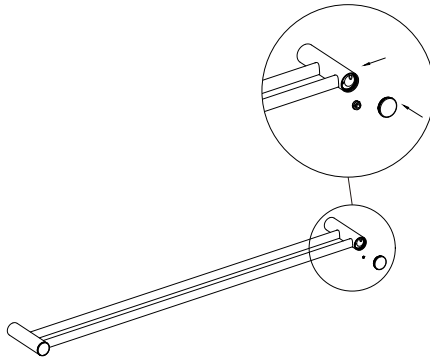

3. Insert the shortened rail back into the bracket. Tighten the grub screw to secure it, and replace the end cap.

MAINTENANCE AND CARE


- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

Zen SS316L

Double Towel Rail

800mm

Nero



Versions:202405


Drawing	Features	Packaging Includes
	<ul style="list-style-type: none">- 316L grade stainless steel construction for durability- Customizable length- Easy to install	<ul style="list-style-type: none">1x Double Towel Rail 800mm1x Fixing Kit
Finish & SKU		
Brushed Bronze NR1630dBZ	Graphite NR1630dGR	
Brushed Gold NR1630dBG	Brushed Nickel NR1630dBN	

*Dimensions are nominal measurements only.


Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS


- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

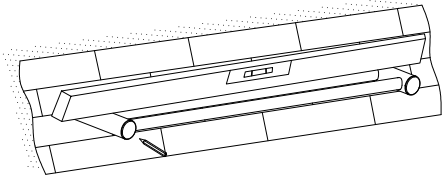


1. Place the towel rail in the desired installation position.
Use a level to ensure it is horizontal.
Mark the positions directly below the bases with a marking pen.

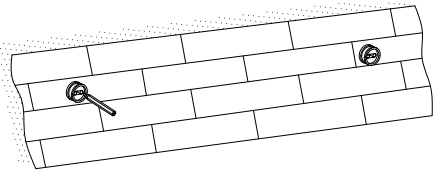


2. Position the fixing blocks at the marked spots.
Mark the drilling points through the fixing block holes.

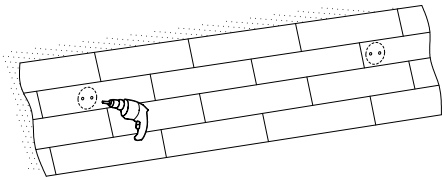


3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

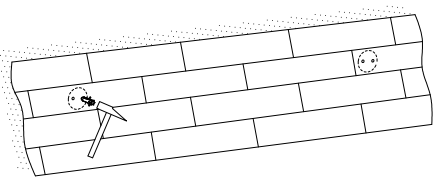

4. Insert the expansion plugs into the drilled holes using a hammer.

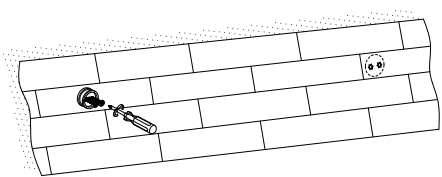


5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

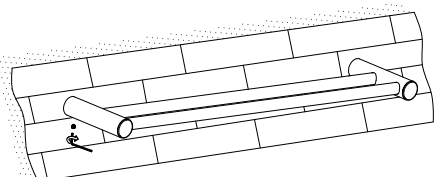


6. Install the towel rail onto the fixing blocks.
Tighten the grub screws into the base to secure it tightly and firmly against the fixing blocks.

OPTIONAL CUSTOMIZATION:


If required, the right side of the towel rail can be shortened to fit your bathroom.

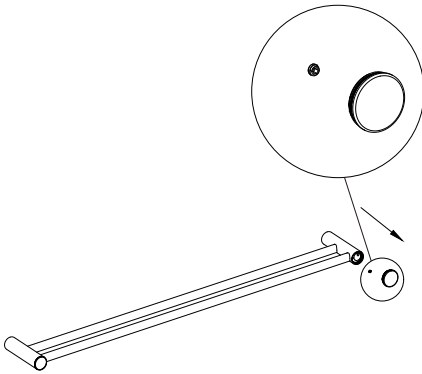

1. Detach the end cap from the right side of the towel rail. Loosen the grub screw holding the rail in place.

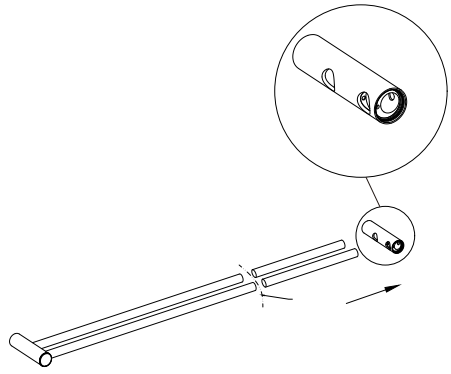

2. Use a hacksaw or pipe cutter to cut the towel rail to the desired length, then deburr the end with a file or grinder.

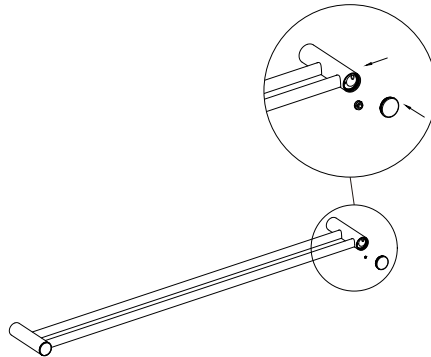

3. Insert the shortened rail back into the bracket. Tighten the grub screw to secure it, and replace the end cap.

MAINTENANCE AND CARE

- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.