


600mm Glass Mount  
Single Towel Rail

Nero

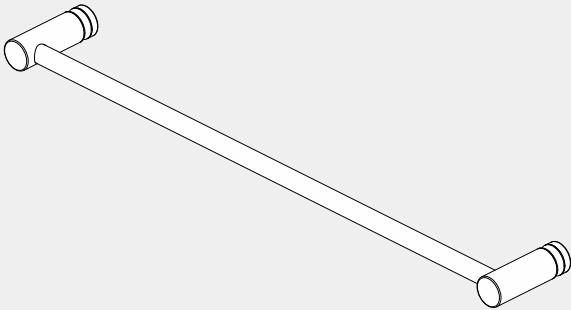

Version: 202605


Drawing

Specifications

Package Includes

SKU  
26H001

1x Towel Rail  
1x Installation Kits

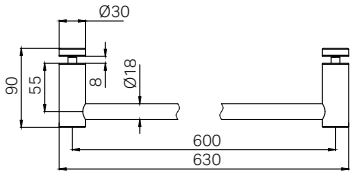

Finishings

- **Chrome**  
26H001CH
- **Gun Metal**  
26H001GM
- **Brushed Bronze**  
26H001BZ
- **Matte Black**  
26H001MB
- **Brushed Gold**  
26H001BG
- **Brushed Nickel**  
26H001BN

\*Dimensions are nominal measurements only


# INSTALLATION INSTRUCTIONS

## GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.

## Important Information

Suitable installation for **8-12mm** toughened glass.

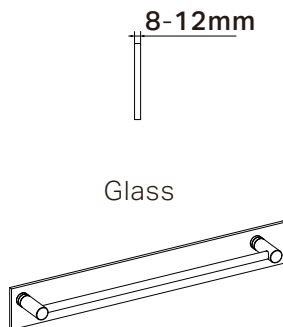


## INSTALLATION STEPS


Remove product and check for any abnormalities, if faulty do not install and contact supplier.




To remove Mounted Cap (Part No. 1) turn counterclockwise.

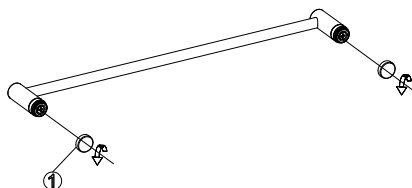


Using a screwdriver to turn (Part No. 2) counterclockwise and remove it. Then remove the remaining parts in order.

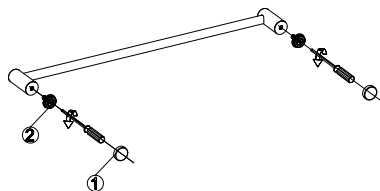


Prepare for installation. Check that all parts numbered 1-6 are included. A screwdriver is required.

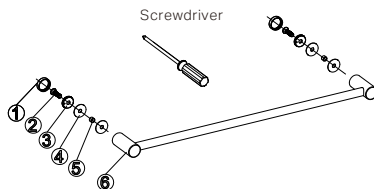


Holes (10mm) for installation must already be drilled/cut prior to installation. (Refer installation dimensions for accurate measurements) and place the towel rail in desired position.

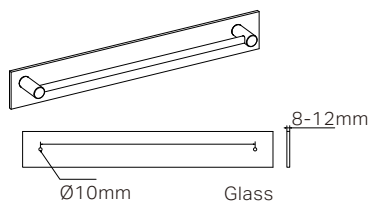


Place parts No. 3, 4, and 5 onto part No. 2 in order. Pass the assembled part No. 2 through the round hole in the glass. Use a screwdriver to tighten it clockwise into part No. 6. **Do not overtighten.**

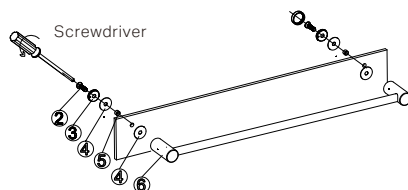

Finally, turn part No. 1 clockwise into part No. 3 to complete the installation.

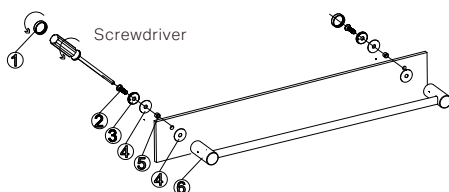

Finally, turn part No. 1 clockwise into part No. 3 to complete the installation.

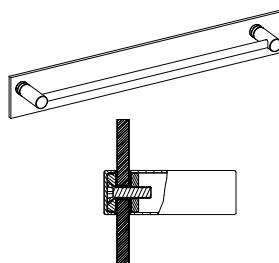

# Nero

