


Mecca Round Freestanding Mixer With Hand Shower II

Nero

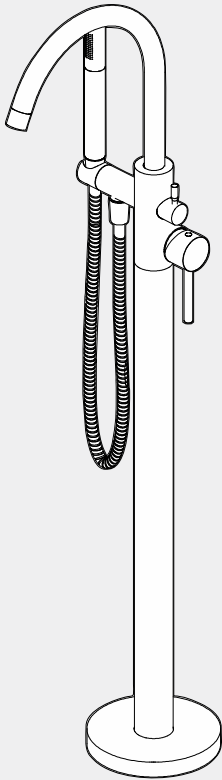

Version:202606

Drawing	Specifications	Packaging Includes
	SKU NR210903b Watermark License WM-060073 Temperature Rating Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa Finish  Rome Bronze NR210903bRB  Tumbled Antique Brass NR210903bTA	Mixer Tap x1 Extension Tube x1 Floor Cover Plate x1 Water Pipes x2 leveling Plate Screw x4 leveling Plate x1 Gradiometer x1 Flange Screw x4 Testing Plug x2 Recessed Box x1 Sleeve Anchor Kit x4 Hand Shower (Built-in Dual Check Valve)x1 Shower Hose x1 Gloves x1 Installation Manual x1 Allen Key Set X1

*Dimensions are nominal measurements only.

Installation Instruction


Please check all spare parts against the list when you open the package.

If any problems, please contact with us.


Spare parts list is as follow.

Spare Part List


- 1.Mixer Tap x1
- 2.Extension Tube x1
- 3.Floor Cover Plate x1
- 4.Water Pipes x2
- 5 leveling Plate Screw x4
- 6.leveling Plate x1
- 7.Gradiometer x1
- 8.Flange Screw x4
- 9.Testing Plug x2
- 10.Recessed Box x1
- 11.Sleeve Anchor Kit x4
- 12.Hand Shower x1
- 13.Shower Hose x1
- 14.Gloves x1
- 15.Installation Manual x1
- 16.Allen Key Set x1
- 17.Dual Check Valve x1

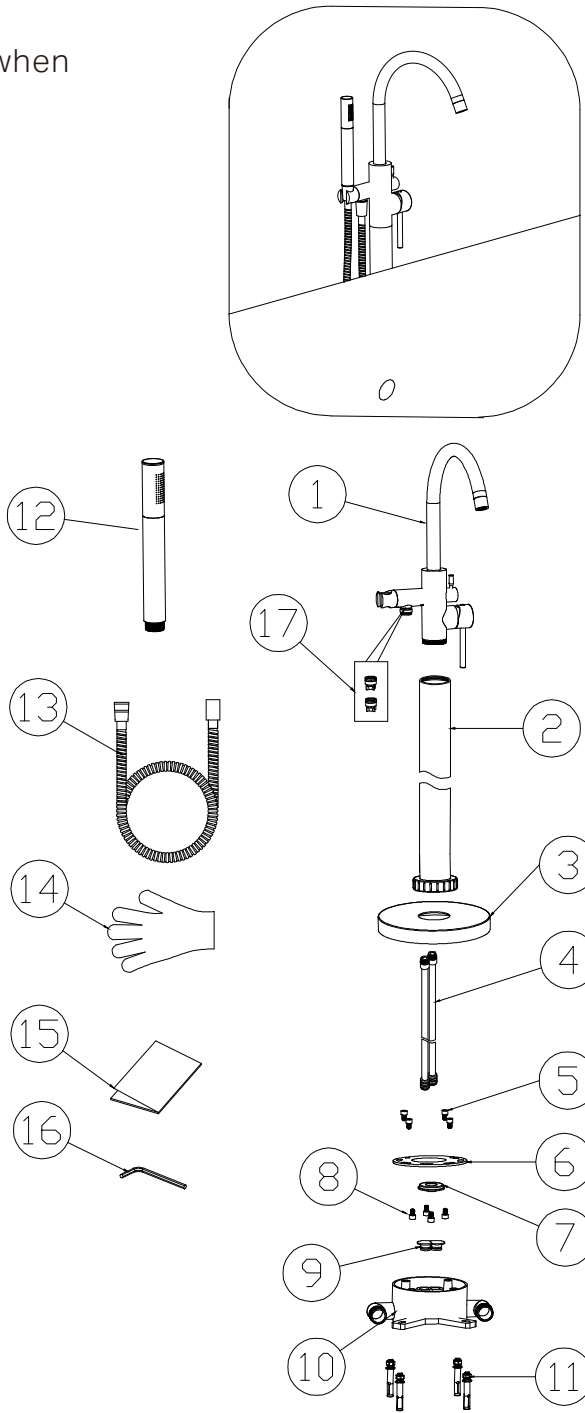

Notes:The floor thickness for tap installation shall be a minimum of 50 mm. If the existing floor thickness fails to meet this requirement, the floor must be raised by at least 30 mm prior to installation.

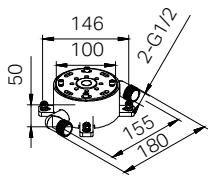

1.Drill holes on the raw house floor, and reserve sufficient clearance between the bathtub and the recessed box.

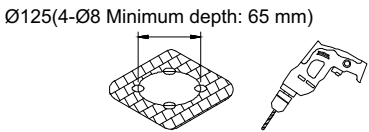

2.Adjust the position using the gradiometer fitted on the recessed box, then secure it with M6 Sleeve Anchors.




3.Connect the inlet water pipes according to the cold and hot water marking labels, then carry out a water pressure leakage test to ensure zero leakage.




4.Take care to protect the recessed box during floor screeding and laying.




5.Undo 4 grub screws on the leveling plate and take out the gradiometer and testing plug.

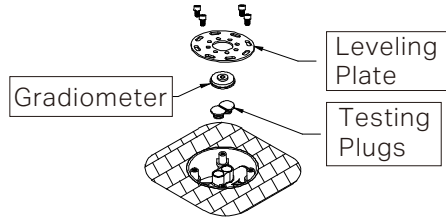


6.Slide the floor cover plate onto the extension tube .

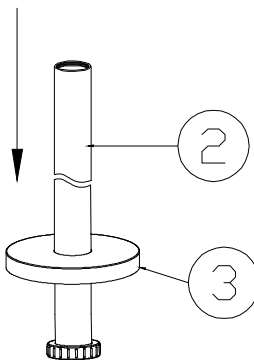


7.Screw hot and cold water pipes into the mixer tap with the allen key, align matching marks, then screw in extension tube.

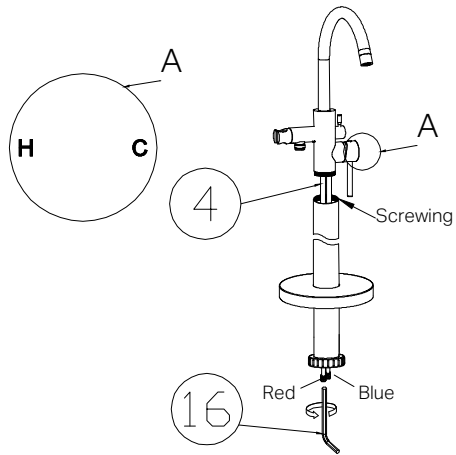



8.Fasten the extension tube to the mounting bracket via the flange screws.

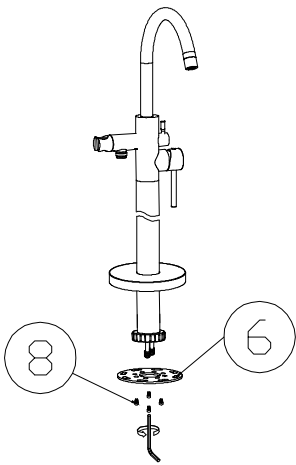

9.Insert the water pipes into the matching holes of the recessed box, then adjust the position of the water spout relative to the bathtub. Fasten the mounting bracket to the recessed box body using the mounting bracket screws.

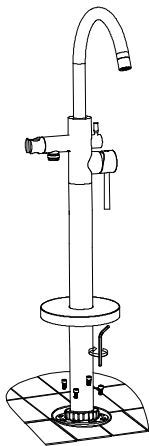

10.Screw the shower hose onto the mixer tap and the hand shower , making sure the sealing washer and the dual check valve is in place.

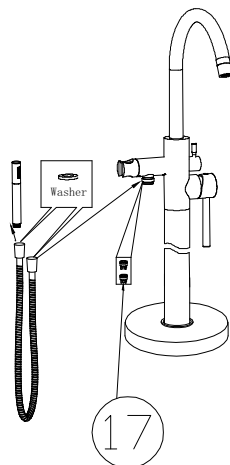

Nero

