

Pure SS316L


Wall Basin/Bath Mixer

Whole Set

Nero



Lead Free

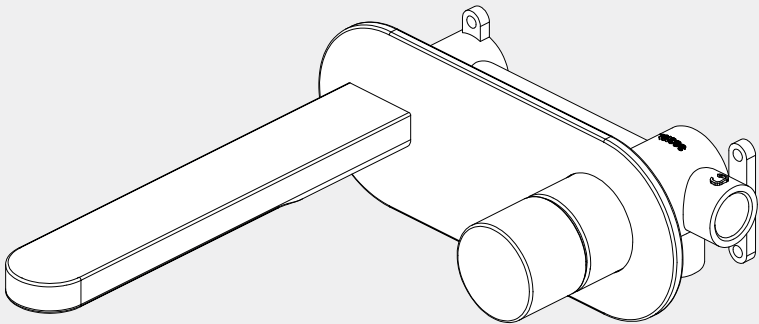

Version : 202503




Drawing	Specifications	Packaging Includes
	Watermark License WM-060073	1 x Universal Body
	Temperature Rating Min 1 °C - Max 75 °C	1 x Trim Kits Only
	Pressure Rating Min 150kpa - Max 500kpa	
Finish & SKU		
<div><div><div></div><div>Brushed Bronze</div><div>NR172210aBZ</div></div><div><div></div><div>Brushed Gold</div><div>NR172210aBG</div></div><div><div></div><div>Graphite</div><div>NR172210aGR</div></div><div><div></div><div>Brushed Nickel</div><div>NR172210aBN</div></div></div>		

*Dimensions are nominal measurements only.
*Includes an additional non-restrictive aerator for bath use.

Installation Instruction For Body

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.

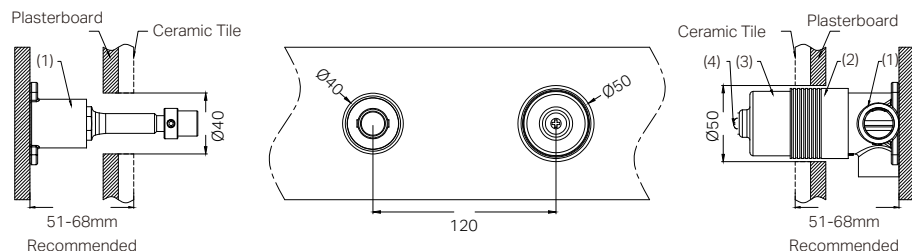


1. Secure the mixer body (1) to the nogging, ensuring an installation depth of 51-68mm from the nogging to the ceramic tile.

Note: Do not remove the plastic sleeve (2) from the mixer body.

2. Connect the cold and hot water supply lines and perform a leak test.


3. Drill a 50mm and a 40mm hole in the plasterboard for mixer body installation, and then position the plasterboard as shown in the above diagram.

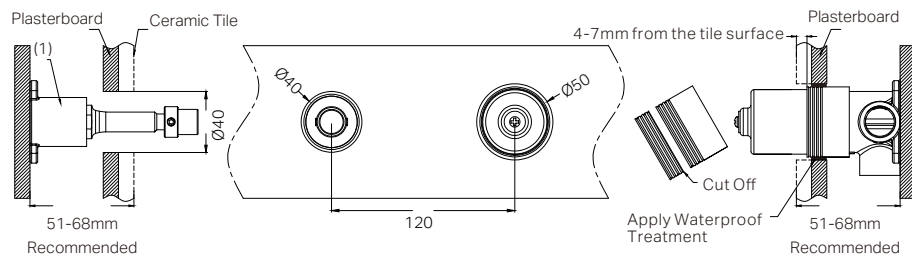

4. Measure 4-7 mm inward from the tile's outer surface and mark the corresponding position on the plastic sleeve. Then, waterproof the gap between the plasterboard and body.


5. Remove the self-tapping screw, washer, and plastic sleeve, then cut the sleeve at the marked point.

6. Reattach the self-tapping screw, washer, and plastic sleeve.

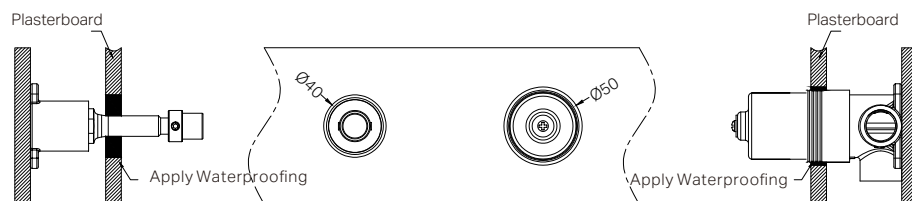


7. Waterproof the gap between the plasterboard and body

Installation Instruction For Trim Kits

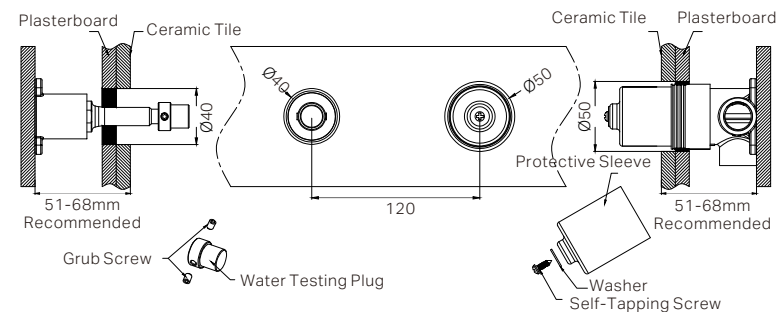


1. Drill a 50mm and a 40mm hole in the ceramic tile, then position it as shown in the above diagram.
2. Undo the self-taping screw to remove the protective sleeve, and release the grub screws to remove the water testing plug.

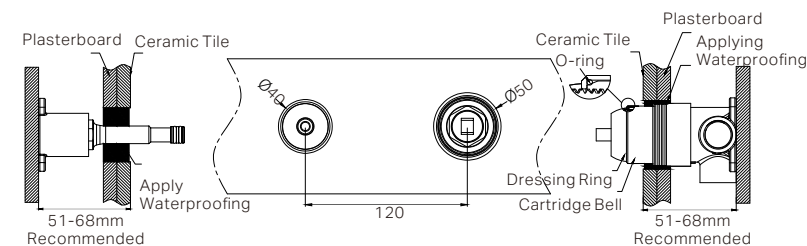

3. Insert the O-ring to the cartridge bell groove, and slide the dressing ring onto cartridge.

4. Apply waterproofing to the area indicated in the diagram above.

5. Tighten up the dressing ring on the cartridge bell.

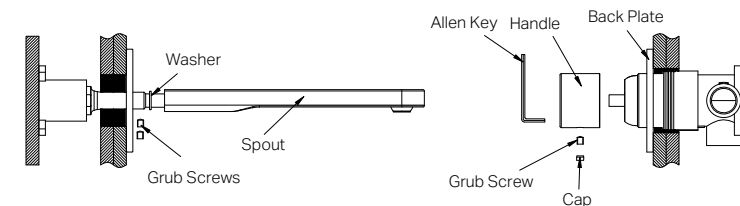

6. Slide the back plate and washer onto the wall, set the spout in place, and secure it tightly using the grub screw.

7. Position the handle, tighten it with a grub screw using an allen key, and cap the grub screw hole. please note: there is a washer between back plate and the spout.

MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

www.nerotapware.com.au

Nero

