



Tile Insert V Channel 800x82 mm Floor Grate 50 mm Outlet

Nero

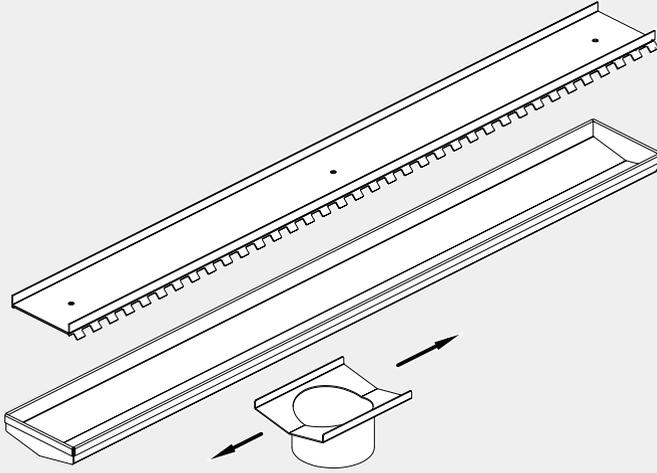

Version : 202512

Drawing

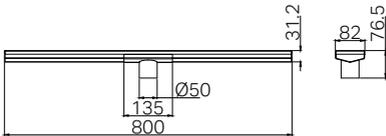

(Not Included)

Specifications

Watermark License

WM-032203

Finish & SKU

 **Brushed Nickel**
NRFG011HSBN

 **Gun Metal**
NRFG011HSGM

 **Brushed Bronze**
NRFG011HSBZ

 **Matte Black**
NRFG011HSMB

 **Brushed Gold**
NRFG011HSBG

Packaging Includes

1x Floor Grate
1x 50 mm Outlet

*Dimensions are nominal measurements only

INSTALLATION INSTRUCTIONS


GENERAL INFORMATION

- This product must be installed by a licensed plumber. Ensure that your plumbing installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- Do not pour concrete around floor grate. Use timber formwork and install the grate only after concrete has been fully cured.
- Apply a waterproof membrane compliant with AS 3740 between the substrate and finished tile surface before laying tiles.


IMPORTANT NOTES FOR INSTALLATION

- Confirm a puddle flange has been correctly installed and is compatible with the outlet pipe.
- Reserve sufficient installation space around the outlet.
- Ensure all parts are clean and free from debris, adhesive or sealant.
- Use UV- and weather-resistant sealants for all external sealing.


INSTALLATION STEPS

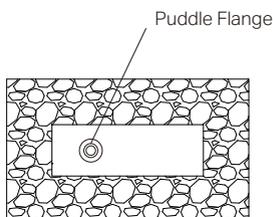


01. Confirm a puddle flange has been correctly installed and is compatible with the outlet pipe.

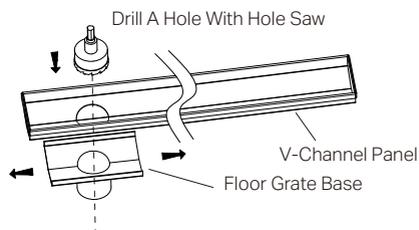

02. Drill a hole in the V-Channel Panel using a hole saw, aligned to the drainage point.

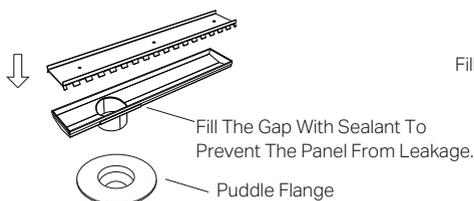

03. Install all the parts as shown in the diagram.
NOTE: Seal around the contact area with sanitary-grade silicone.

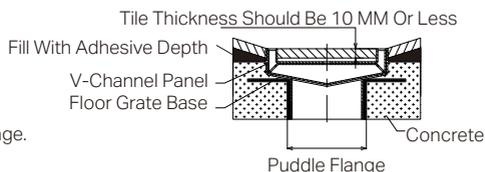

04. Lay the floor tiles and ensure the tiles have an appropriate slope toward the floor grate to make the water flow efficiently into the grate.
NOTE: The thickness of the tile should not exceed 10mm.

Final Placement and Cleaning

Clean up and check for leaks.

MAINTENANCE AND CARE

- Clean the grate with a soft cloth or non-abrasive brush.
- Avoid sharp or metallic tools when clearing blockages.
- If clogging occurs, use a plunger or soft drain snake.
- Do not use harsh chemical cleaners which may damage the finish or membrane.

Nero



Warranty Policy