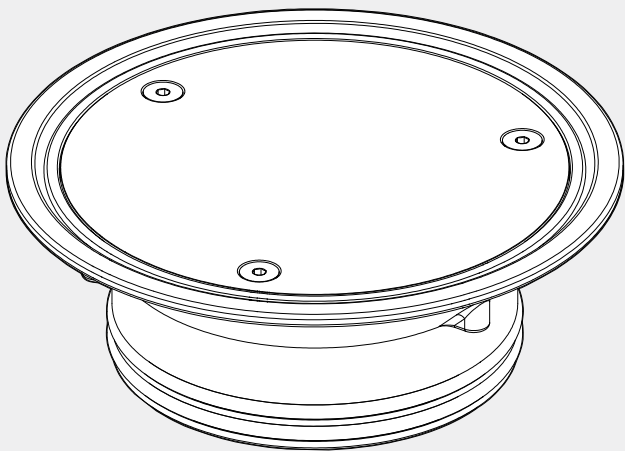


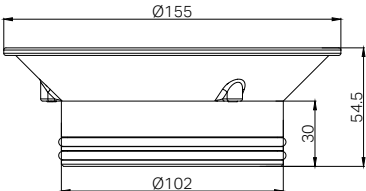
Vinyl
Floor Clean-Out Suit
100mm Outlet

Nero



Version : 202604

Drawing



Specifications

Watermark License
WM-032203

Packing Includes

1x Vinyl Floor Clean-Out

Finish & SKU

Brushed Nickel
NRFW014BN

PVD Black
NRFW014PB

Gun Metal
NRFW014GM

Brushed Gold
NRFW014BG

Brushed Bronze
NRFW014BZ

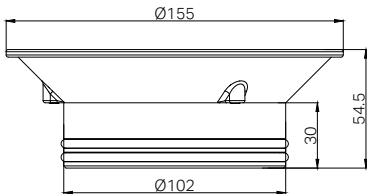
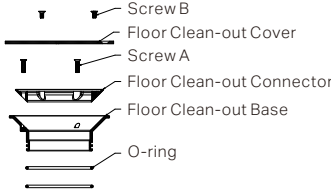
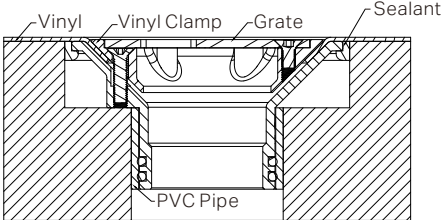
*Dimensions are nominal measurements only

INSTALLATION INSTRUCTIONS

GENERAL INFORMATION

- Install the clear out in an accessible location to allow inspection and maintenance of the drainage line, complies with Australian/New Zealand Standard AS /NZS 3500 and local authority requirements.
- Ensure the cap is securely fitted, watertight, and removable, and that the clear out is not concealed by permanent fixtures or finishes.
- After works are completed, flush the line to confirm correct operation, refit the cap properly, and check for leaks.

Installation Instructions

			The installation of this Shower Grate is subject to the requirement of National Construction Code Volume. The Plumbing Code of Australia (PCA), associated reference standards as applicable at the time and WMTS040. The Maximum live load bearing is 100KG.	
Clear Out Dia	Spiggot Size	Nominal OD Floor Clean-out Pipe	NOTES: 	
102mm	110mm	100mm PVC		
Instruction Note: Installation to pipework via jointing methods as per AS/NZS3500.2.				
				
			Step 1 - Undo screws B from the grate/cover, remove the grate/cover. Undo screws A from the vinyl clamp, remove the vinyl clamp. Step 2 - Apply a bead of sealant around the underside of the waste. Step 3 - Insert the body of the waste into the prepared hole and push into the PVC/HDPE/CU pipe. Step 4 - Lay flooring, making sure that there is adequate cover so that the vinyl clamp forms a seal. Step 5 - Replace vinyl clamp and screws A into place. Step 6 - Close/replace the grate/cover and re-fit screws B. Step 7 - Once installation complete, check the grate provides adequate drainage (clear outs excluded).	

Nero

