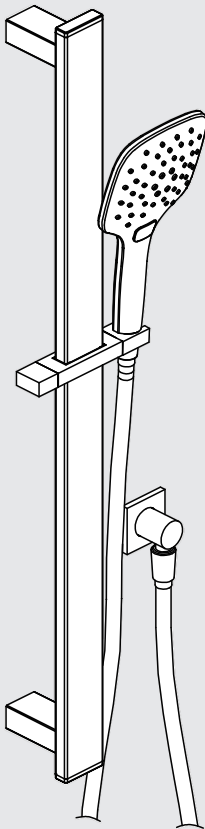


Rain Square 3 Function Shower Rail

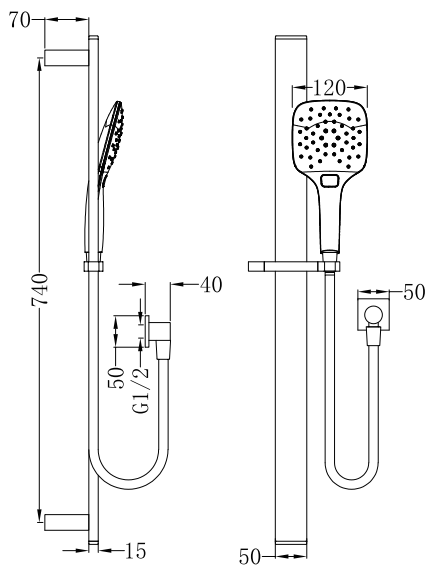
Nero



Versions:202506



Drawing



Specifications

Watermark License
WM-060093
Temperature Rating
Min 1°C-Max 75°C
Pressure Rating
Min 150kpa - Max 500kpa


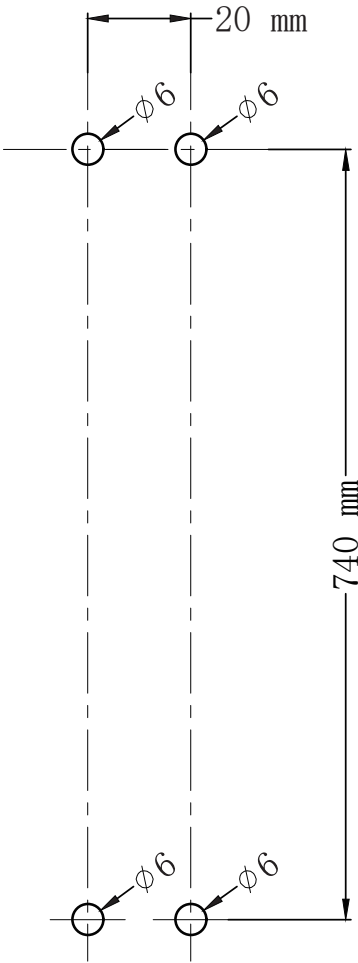
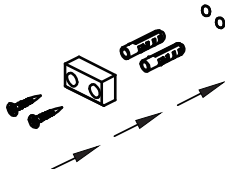
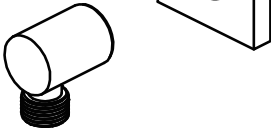
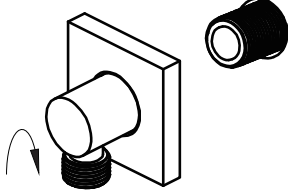
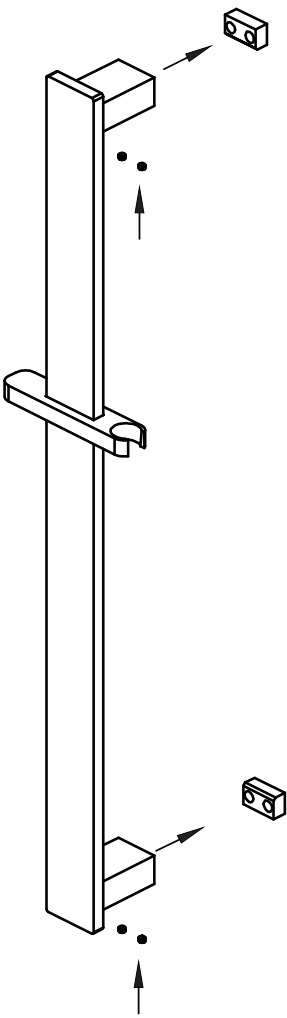
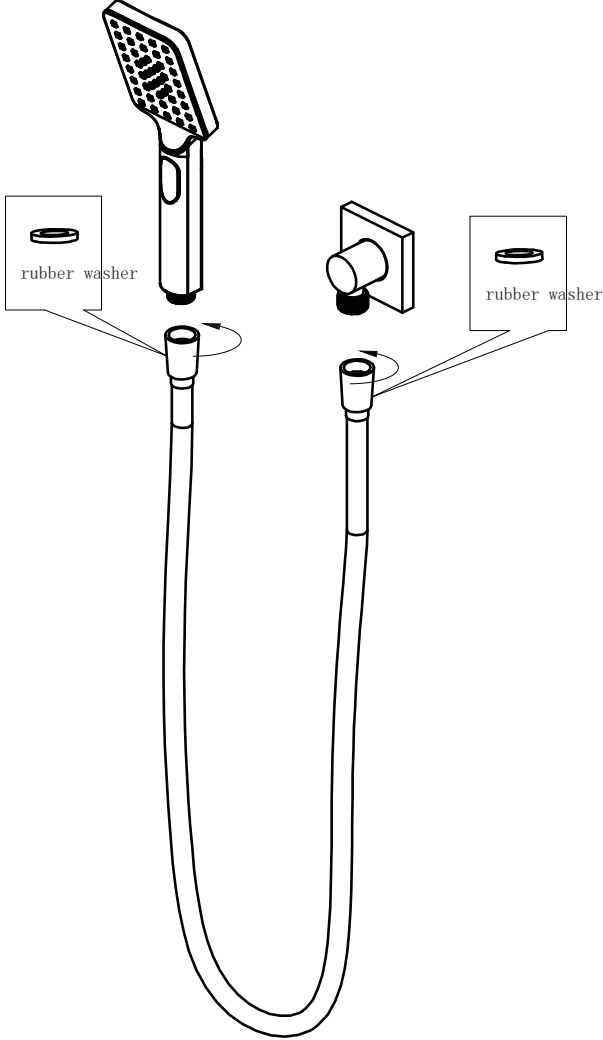
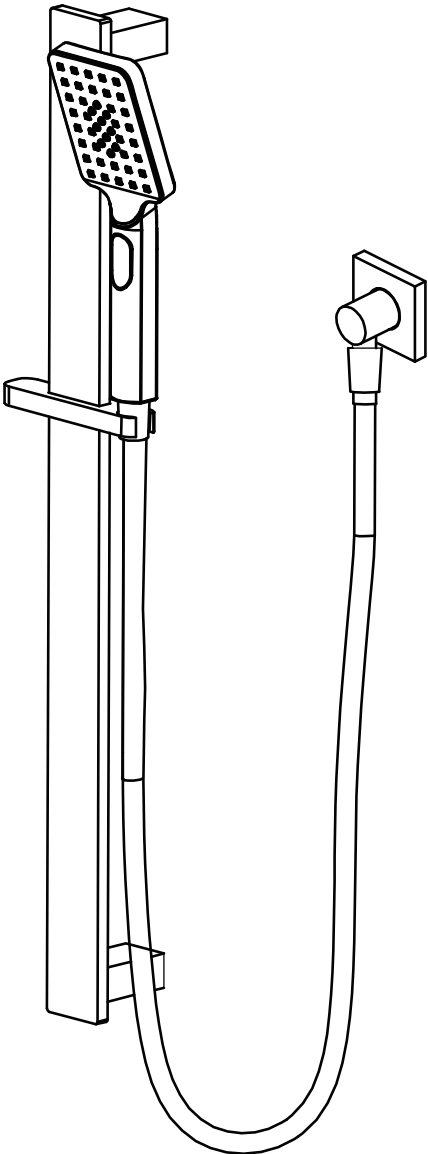
Packaging Includes

- 1x Handle Shower (built-in Check Valve)
- 1x Shower Hose
- 1x Elbow
- 1x Shower Rail

Finish & SKU

Chrome
NR304CH

*Dimensions are nominal measurements only.

 1.Put Teflon tape on outlet thread.	 4.Drill four holes according to above picture.	 5.Make expansion plug into four holes and make brackets into holes by tapping screw.
 2.Pull dressing ring on the elbow body.		
 3.Screw elbow body on to outlet.		
 6.Install shower rail onto brackets,tighten four grub screws by hex wrench.	 7.Connect hand shower and elbow by shower hose. (Notes: there are two rubber washers in shower hose.)	 8.Test and check for leaks.

Nero

