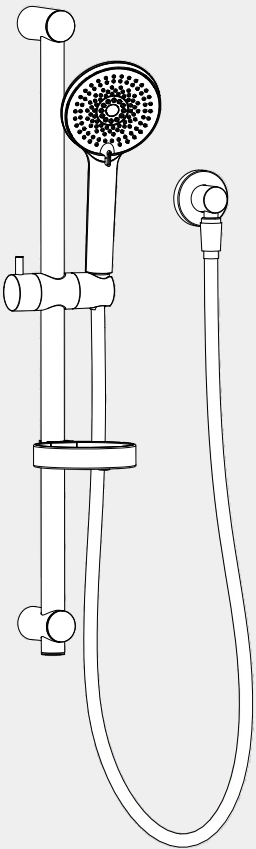
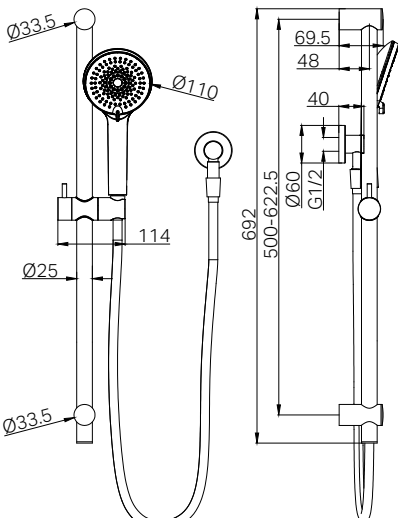


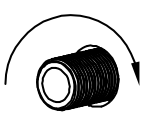
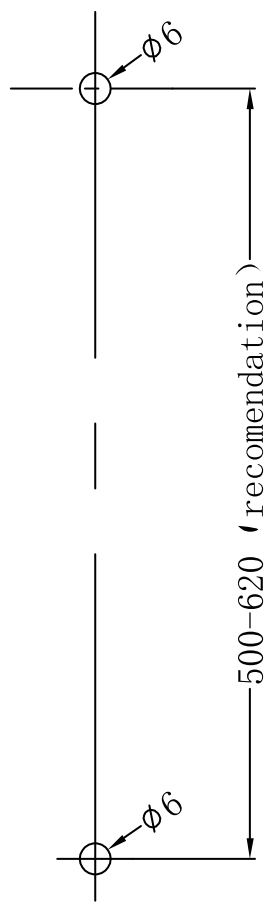
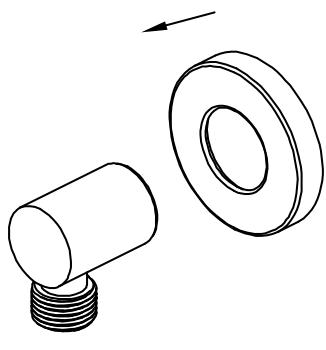
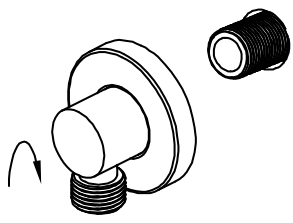
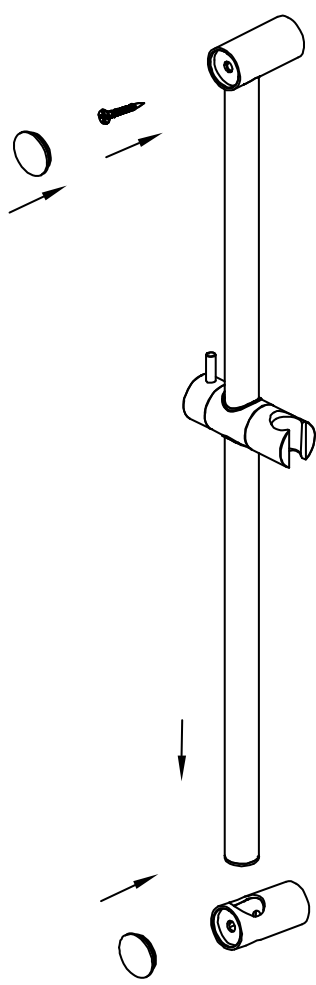
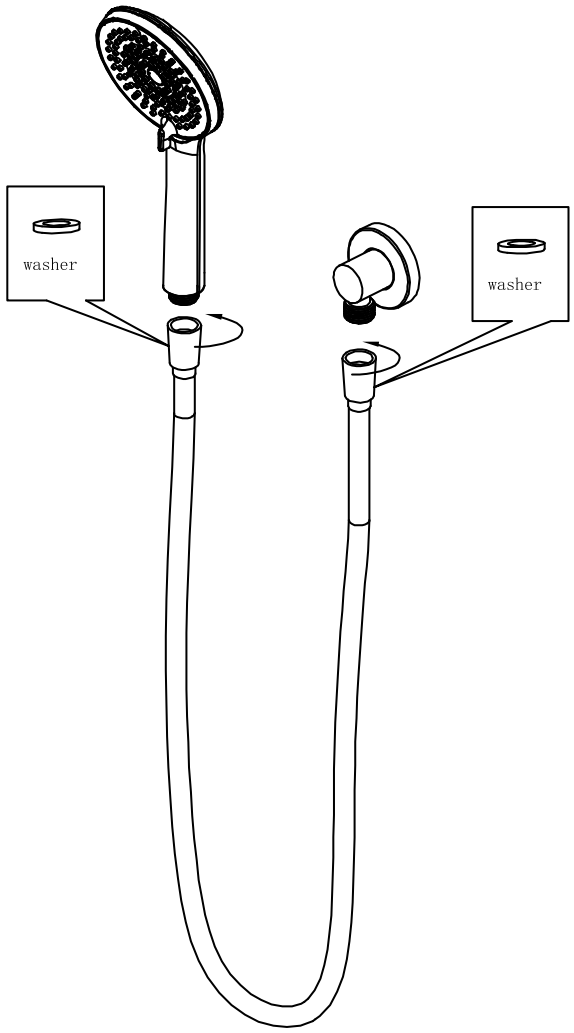
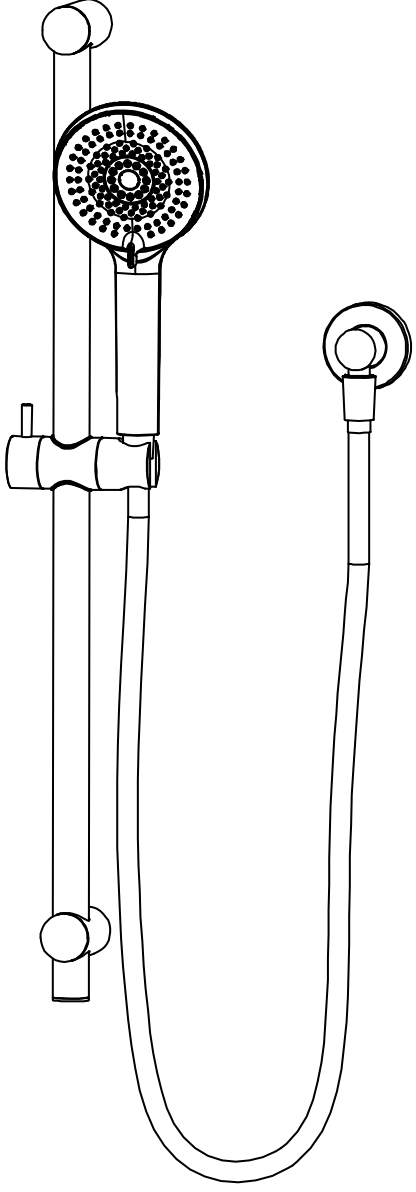
Builder Project
Rail Shower

Nero



Versions:202510

Drawing	Specifications	Packaging Includes
	Watermark License WM-060093 Temperature Rating Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa Finish & SKU ● Matte Black NR315MB	1x Hand Shower (Built- In Check Valve) 1x Shower Hose 1x Elbow 1x Shower Rail
*Dimensions are nominal measurements only.		

 use Teflon tape 1.Put Teflon tape on outlet thread.		
 2.Pull dressing ring on the elbow body.		
3. Screw elbow body on to outlet.		5. Mount bottom bracket on the $\phi 6$ hole by expansion plug and tapping screw.
 6.Plug shower rail in bottom bracket. Mount top bracket on the top hole by expansion plug and tapping screw. Push plates onto two brackets.	 7.Connect hand shower with outlet by shower hose	 8.Test for leaks.

Nero

