

Nero



Drawing

Specifications

Pressure Rating
Min 150kpa - Max 500kpa

Packaging Includes

1 x Rail Shower
1 x Flow-Restricting
Check Valve(Extra)
1 x Installation Kit

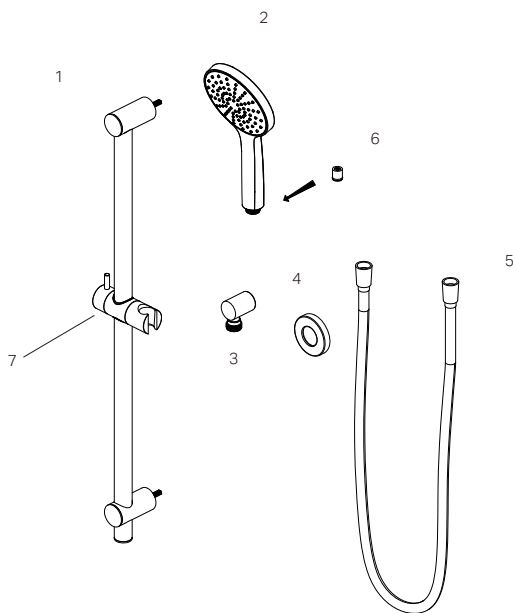
*Dimensions are nominal measurements only.

INSTALLATION INSTRUCTIONS

GENERAL INSTRUCTIONS:

- This product is specifically designed for low water pressure conditions in Australia and New Zealand, allowing you to enjoy a normal water experience even under low pressure, at the same time, we have also provided an additional flow-restricting check valve, allowing you to enjoy an optimal water experience even under mains pressure.
- This product must be installed by a licensed plumber. Ensure that your plumbing installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

PARTS NAME

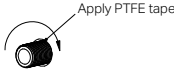
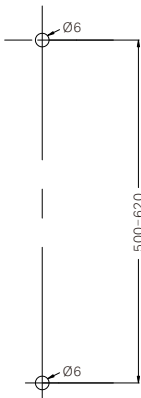
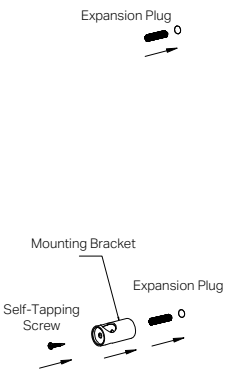
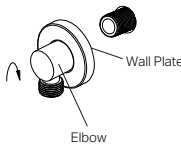
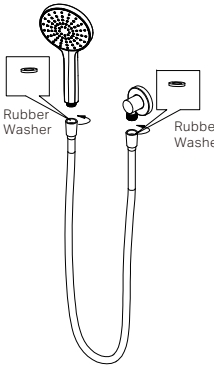
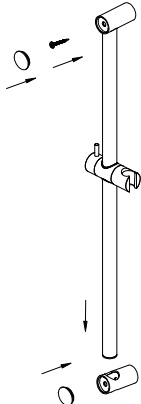


- 1 - Shower Rail
- 2 - Hand Shower
- 3 - Elbow
- 4 - Wall Plate
- 5 - PVC Hose
- 6 - Flow-Restricting Check Valve(Extra)
- 7 - Slider

NOTE:

The hand shower does not contain a **Flow-Restricting Check Valve** by default, making it suitable for low water pressure conditions. Under normal pressure conditions, you will need to install the **Flow-Restricting Check Valve** from the package into the hand shower.

INSTALLATION STEPS

 Apply PTFE tape 01. Apply PTFE tape to the threaded outlet..	 03. Drill two Ø6mm mounting holes as shown in the diagram. NOTE: Ensure holes are aligned vertically.		 Expansion Plug Mounting Bracket Self-Tapping Screw Expansion Plug 04. Use expansion plug and self-tapping screw to Secure the bottom Elbow to the wall.
 Wall Plate Elbow 02. Install Elbow and Wall Plate.	 Rubber Washer Rubber Washer 06. Connect the Hand Shower to the Elbow using the provided PVC Hose. NOTE: Ensure Rubber Washers are in place at both ends of the PVC hose to prevent leaks.		 05. Install the Shower Rail and the top Mounting Bracket. Then, fit the cover onto the NOTE: Under mains pressure, insert the Flow-Restricting Check Valve into hand shower first.

Switch on the water supply and check for any leakage at the joints.
The installation is Complete.

Nero

