



Slim Shower On Bracket II

Nero

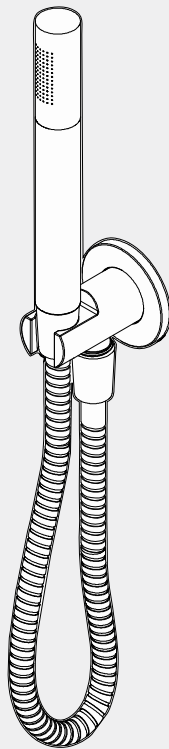

Version:202606

Drawing

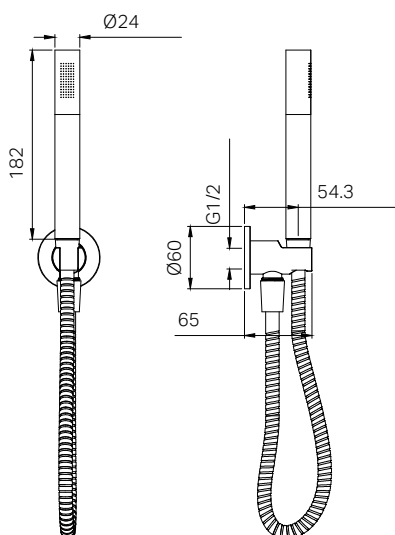

Specifications

SKU

NR323

Watermark License

WM-060093

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Finish



Rome Bronze
NR323RB



Tumbled Antique Brass
NR323TA

Packaging Includes

1x Hand Shower (Built-in Check Valve)
1x 1.5m SUS304 Hose
1x Bracket

*Dimensions are nominal measurements only.


Nero

Installation Instruction


Important

All products must be installed by licensed plumbers.


All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

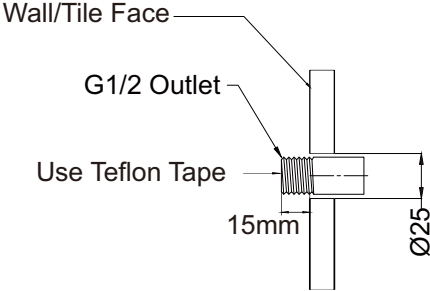


1. Ensure the G1/2 outlet thread extends 15mm beyond the finished wall or tile surface, trim the thread if necessary to achieve this length. Wrap the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.

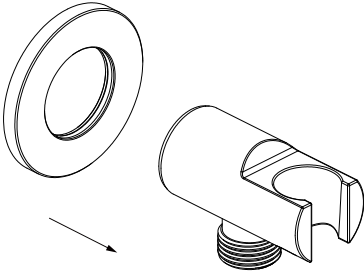

2. Slide the backplate onto the shower bracket.

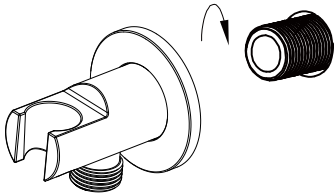

3. Thread shower bracket onto the G1/2 outlet. Do not over tighten. Push the backplate against the wall/ tile surface.

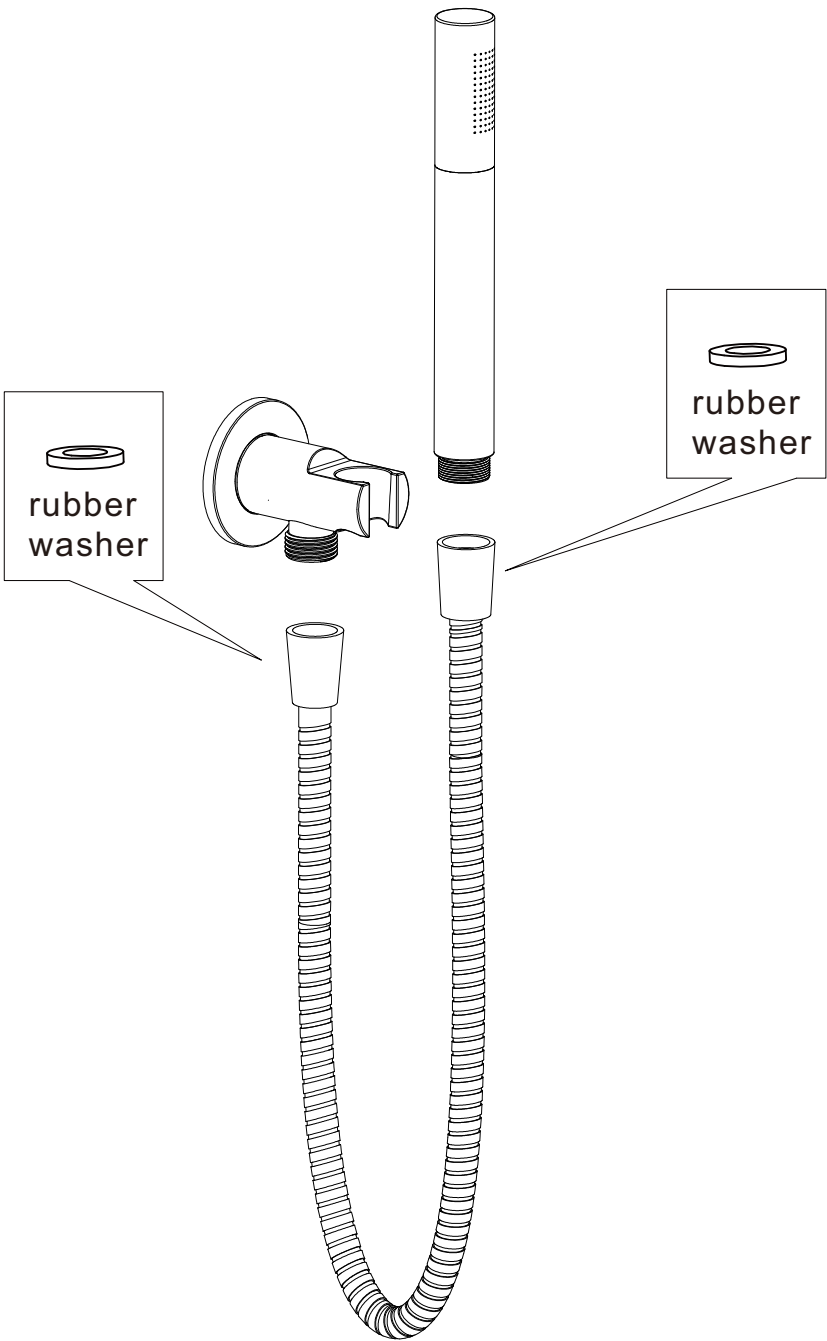

4. Connect hand shower with the hose and shower bracket, ensuring rubber washers are present at both connections for leak prevention. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage

Nero

