


Premium 35MM Universal Shower Mixer With Diverter Horizontal Body Only

Nero


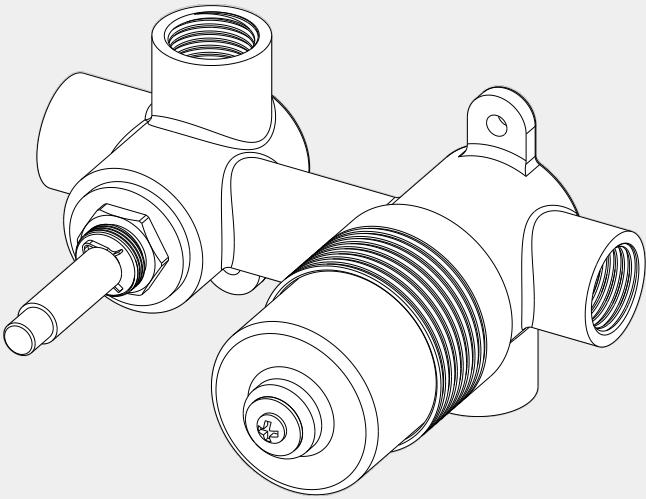


Lead Free



Versions:202506

Top/Back

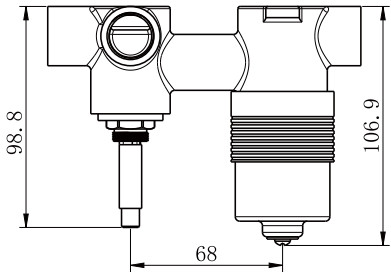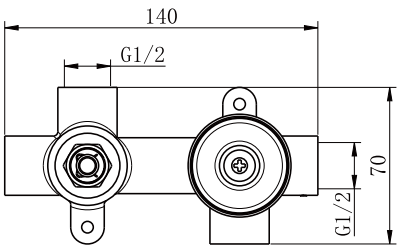

Specifications

SKU
NRUB003ap
Watermark License
WM-060073
Temperature Rating
Min 1°C-Max 75°C
Pressure Rating
Min 150kpa - Max 500kpa


Packaging Includes

1x Mixer Body

*Dimensions are nominal measurements only.
**Only compatible with all Mecca bath / shower mixers.


INSTALLATION INSTRUCTION FOR BODY ONLY

The body is for use with compatible YSW/Nero brand handle sets only.
The trim kits that can be matched with NRUB003AP are NR221911U.


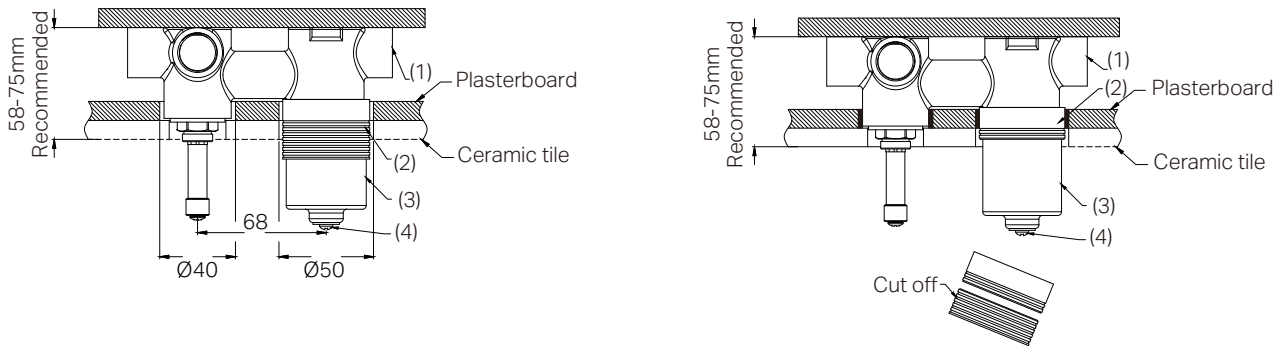


1. Secure the mixer body (1) to the nogging, ensuring an installation depth is 58-75mm from the nogging to ceramic tile.
Caution: do not remove protective sleeve (2) from the mixer body.
2. Connect the cold and hot water supply lines and perform a leak test.
3. drill a $\phi 50$ mm and a $\phi 40$ mm hole in the plasterboard for mixer body, and then position plasterboard as shown in the above image.


4. When the installation depth is 58-70mm, make the protective sleeve (2) 2-4mm from ceramic tile surface to body,
When the installation depth is 71-75mm, make the protective sleeve (2) 4-7mm from ceramic tile surface to body.
Then waterproof the gap between the plasterboard and body.
5. Remove self-tapping screw, washer and plastic. Sleeve, and cut the protective sleeve from the marked point.
6. Reattach self-tapping screw, washer and protective sleeve.

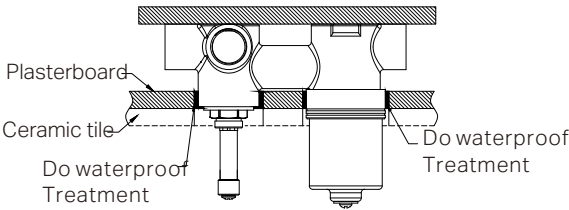


7. Waterproof for the gap the plasterboard and body.

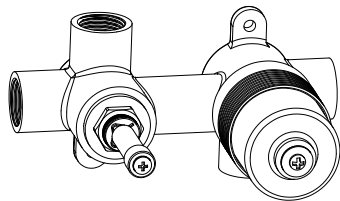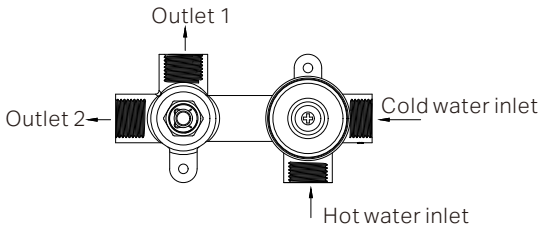


INSTALLATION INSTRUCTION FOR TRIM KITS ONLY

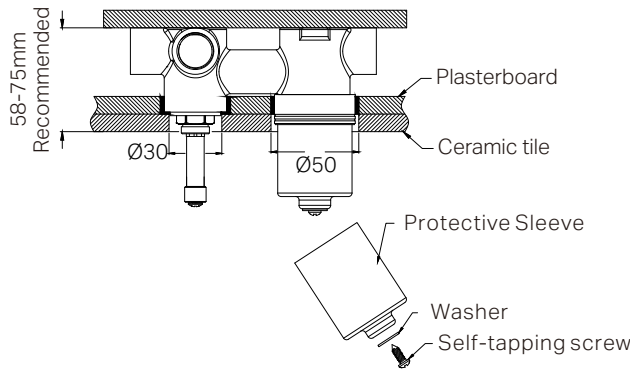


1. Drill a $\phi 50$ mm and a $\phi 30$ mm hole in the ceramic tile, then position it as shown in the above diagram.
2. undo the self-tapping screw to remove the protective sleeve.

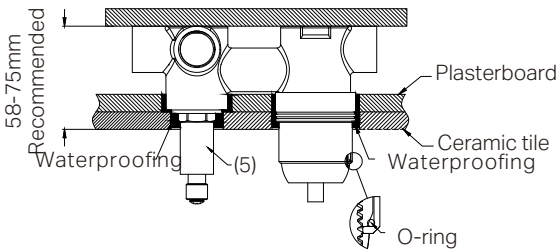

3. Insert the o ring to the dressing bell groove, and slide the cartridge bell onto cartridge and slide Diverter dressing bell onto Diverter cartridge.
4. Apply waterproof treatment to the area indicated in the diagram above.
5. Tighten up the dressing ring on the cartridge bell.

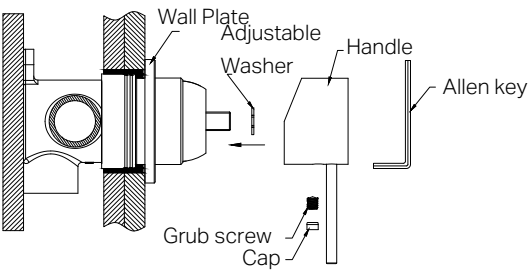

6. Slide the backplates onto body.
7. Attach the washer to cartridge rod, position the handle, tighten it with a grub screw using an allen key, and cap the grub screw hole.

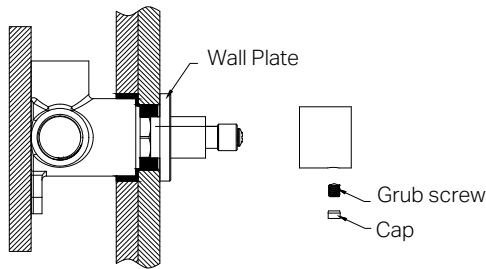

8. Put knob onto Diverter cartridge, tighten it with grub screw using allen key, and cap the grub screw hole.

Nero

