



Premium 35mm Universal Shower System Body Only

Nero

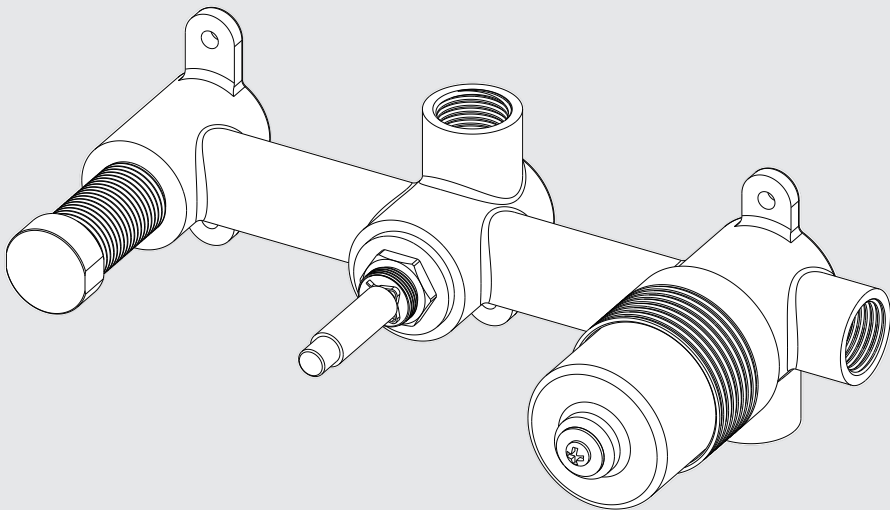

Versions:202506

Top/Back

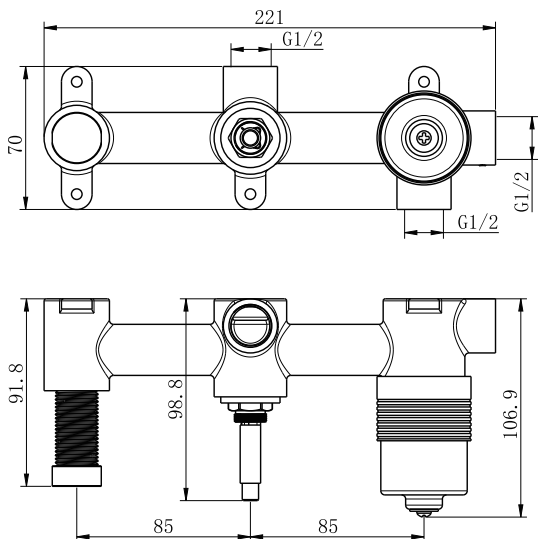

Specifications


SKU
NRUB004P
Watermark License
WM-060073
Temperature Rating
Min 1°C-Max 75°C
Pressure Rating
Min 150kpa - Max 500kpa

Packaging Includes


1x Mixer Body

*Dimensions are nominal measurements only.
**Only compatible with all Mecca bath / shower mixers.


Installation Instruction For Body Only

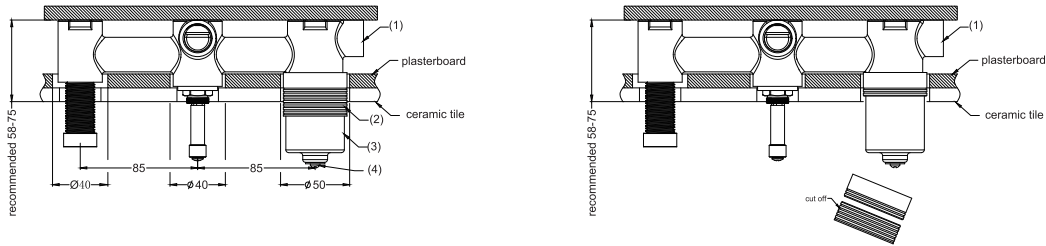


1. Secure the mixer body (1) to the nogging, ensuring an installation depth is 58-75mm from the nogging to ceramic tile.
Caution: Do not remove plastic sleeve (2) from the mixer body.
2. Connect the cold and hot water supply lines and perform a leak test.
3. Drill a $\phi 50$ mm and two $\phi 40$ mm holes in the plasterboard for mixer body, and then position plasterboard as shown in the above image.
4. Mark the plastic sleeve (2) 4-7mm from the ceramic tile surface to the body and waterroof the gap between the plasterboard and body
5. Remove the self-tapping screw, washer, and plastic sleeve, then cut the sleeve at the marked point.
6. Reattach the self-tapping screw, washer, and plastic sleeve.

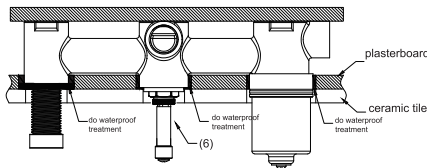


7. Waterproof the gap between the plasterboard and body.

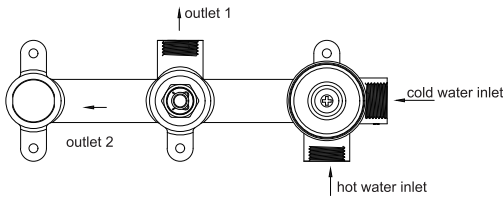


Installation Instruction For Trim Kits Only

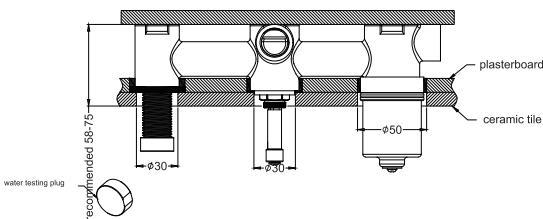


1. Drill a 50mm hole and two 30mm holes into the ceramic tile, then proceed to install the ceramic tile as shown in the diagram above.
2. Remove the water testing plug

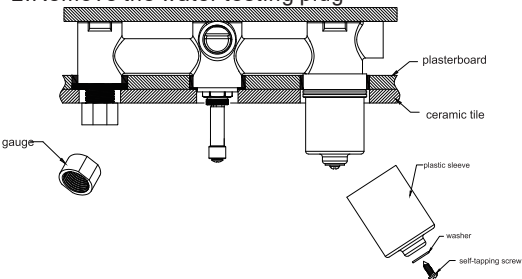

4. Remove the gauge, self-tapping screw, washer, and plastic sleeve in sequence.

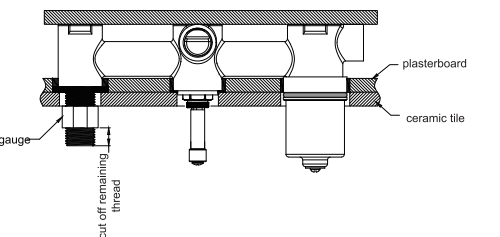


3. Put gauge onto the outlet as above picture. And cut off remaining thread using the provided gauge as a guide.

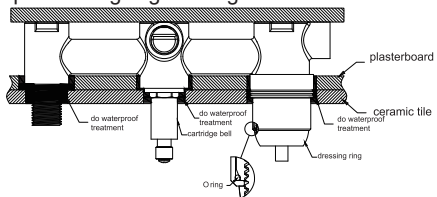


5. Insert the O ring to the dressing bell groove, and slide the dressing bell onto cartridge.
6. Apply waterproof treatment to the three areas indicated in the diagram above.
7. Tighten up the dressing ring on the cartridge bell, and slide diverter cartridge bell onto the cartridge.


Installation Instruction For Trim Kits Only

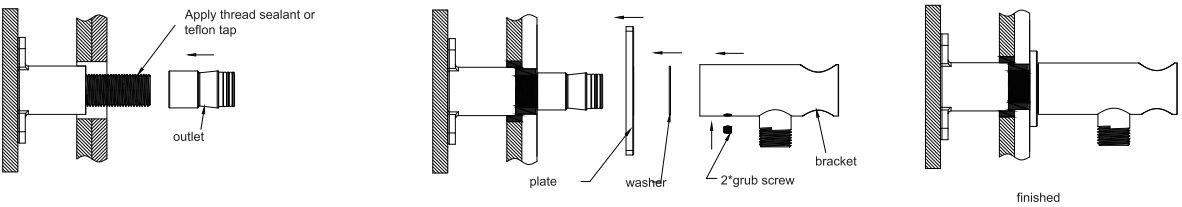

8. Apply thread sealant or Teflon tape to the outlet thread, then use a wrench to tighten the outlet onto it.
9. Install the plate, washer, and bracket onto the outlet body in the order shown above.

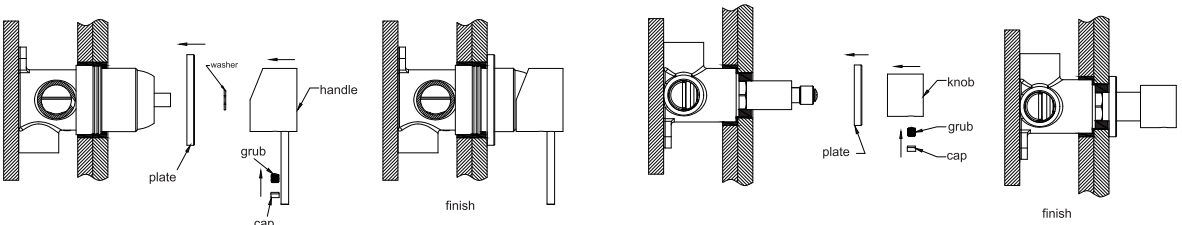

10. Slide plate onto body, attach the washer to the cartridge, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.
11. Slide plate onto body, position the diverter knob, tighten it with a grub screw using an Allen key, and cap the grub screw hole.

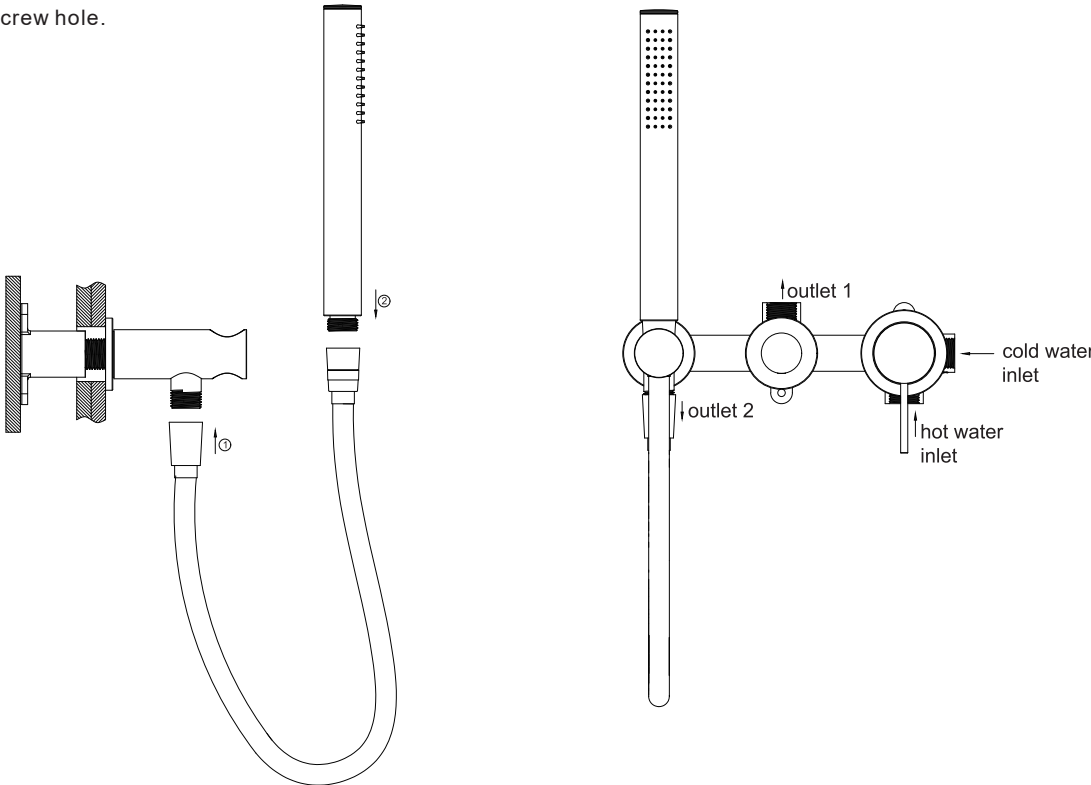

12. Connect the hand shower to the bracket with the hose.
13. TEST & CHECK FOR LEAKS.

Nero

