American Standard

# Cygnet Under Counter Basin

Finished wall

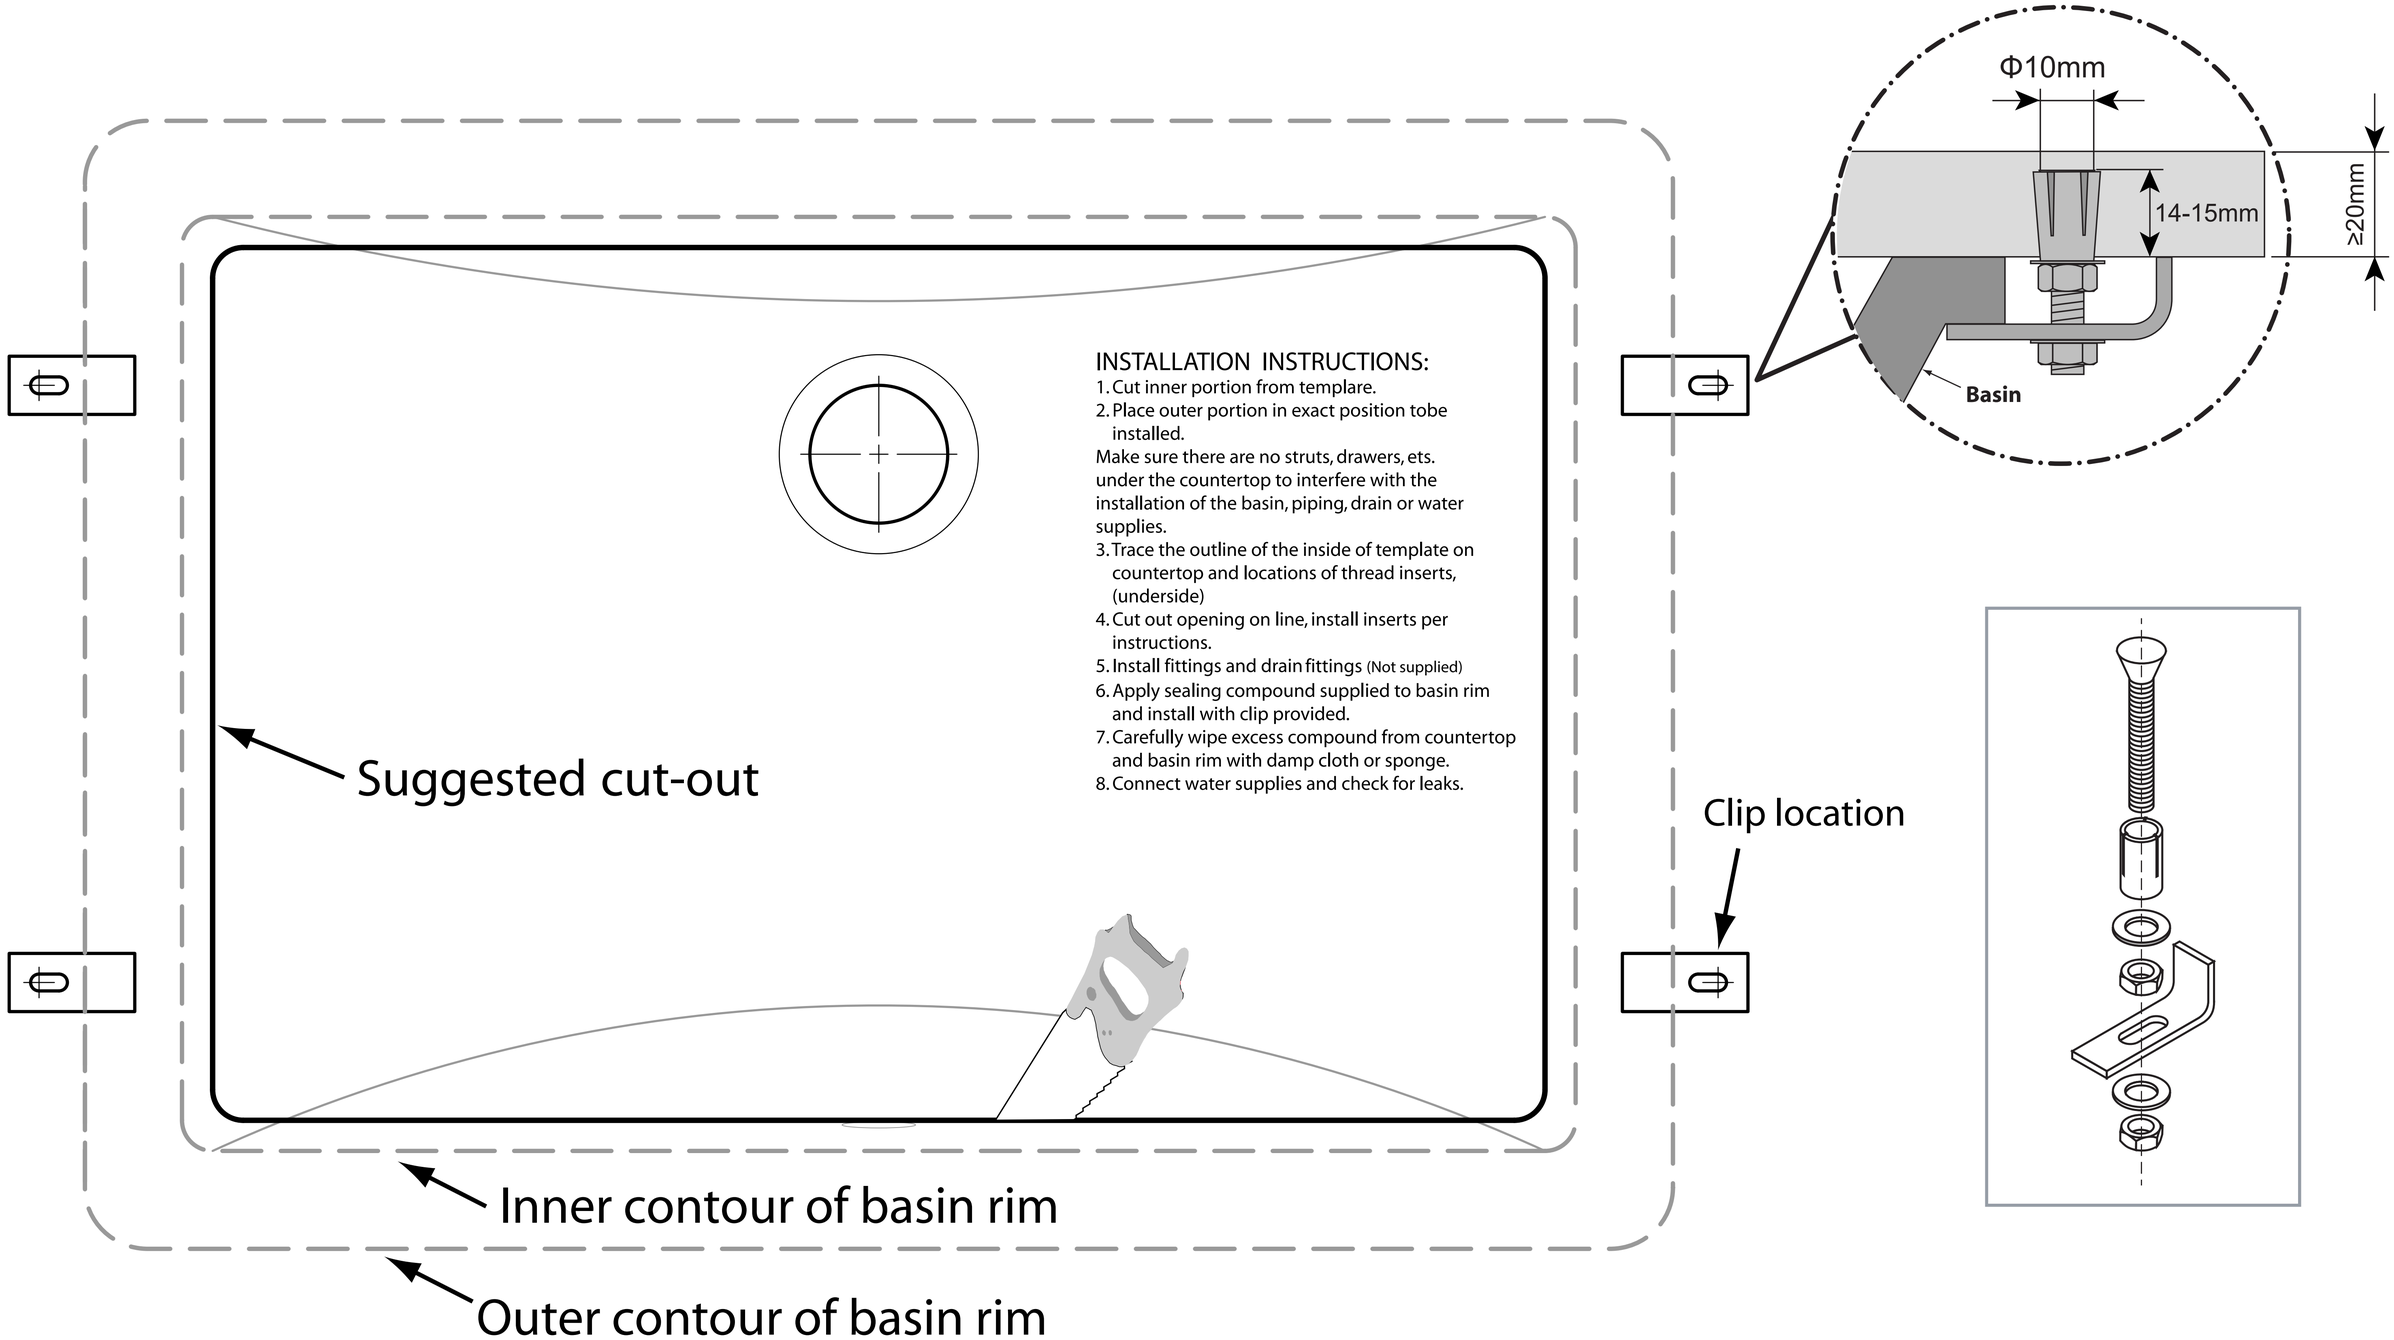


INSTALLATION INSTRUCTIONS:

1. Cut inner portion from templare.
2. Place outer portion in exact position tobe installed.

Make sure there are no struts, drawers, ets. under the countertop to interfere with the installation of the basin, piping, drain or water supplies.

3. Trace the outline of the inside of template on countertop and locations of thread inserts, (underside)
4. Cut out opening on line, install inserts per instructions.
5. Install fittings and drain fittings (Not supplied)
6. Apply sealing compound supplied to basin rim and install with clip provided.
7. Carefully wipe excess compound from countertop and basin rim with damp cloth or sponge.
8. Connect water supplies and check for leaks.

Apr. 2026
M33909 rev.00