


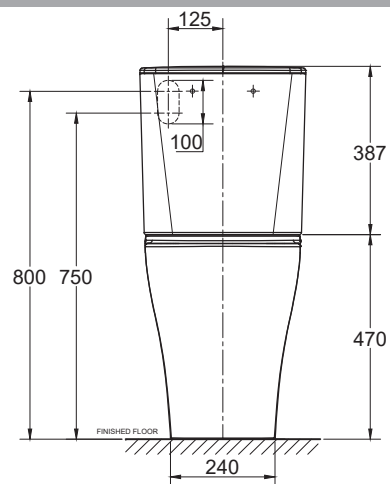
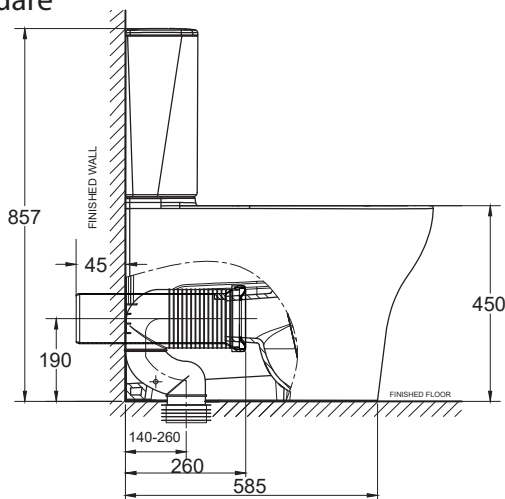
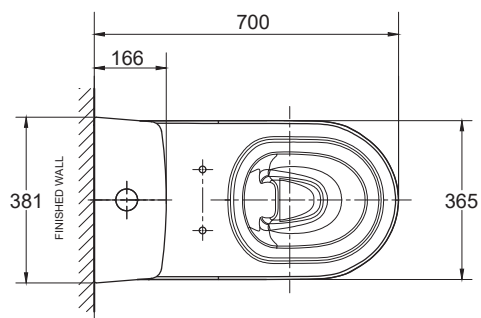


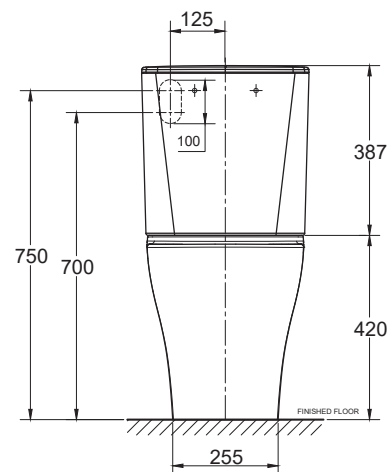


Cygnnet Hygiene Rim Over-height Square

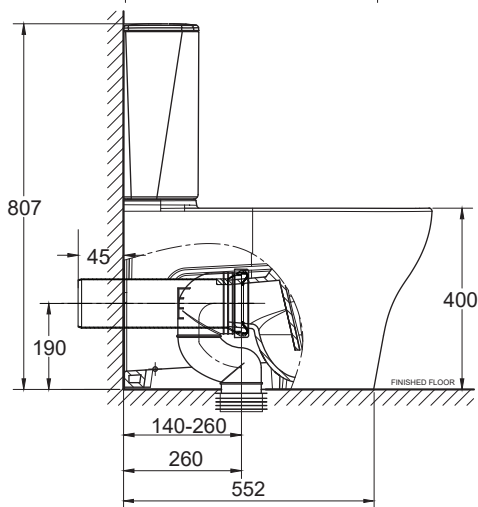


Cygnnet Hygiene Rim Square

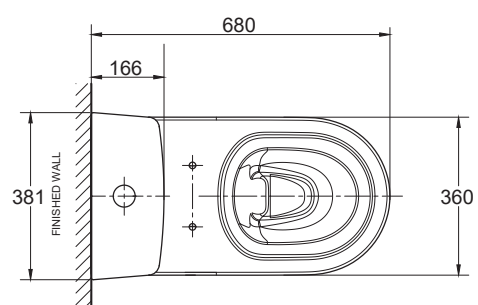


1

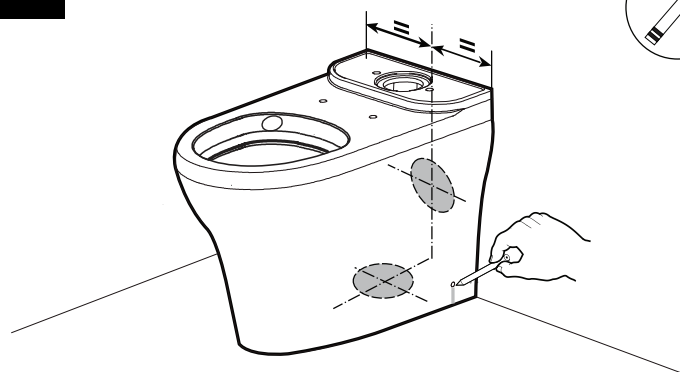

2

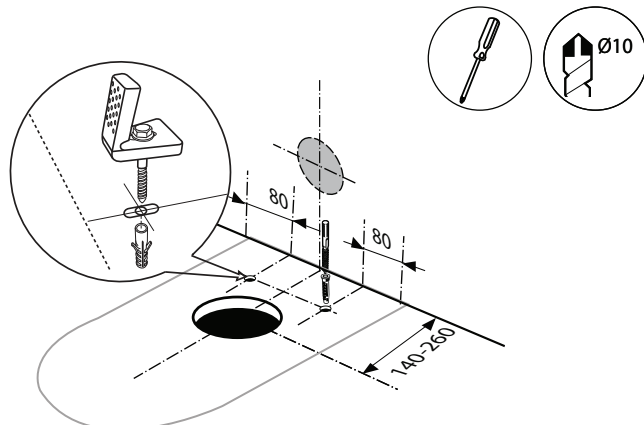


3

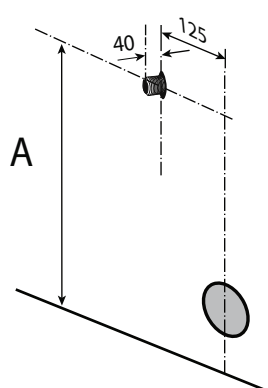

Model	Height (A)
Cygnnet Hygiene Rim Over-height Square	750/800 mm.
Cygnnet Hygiene Rim Square	700/750 mm.




4a

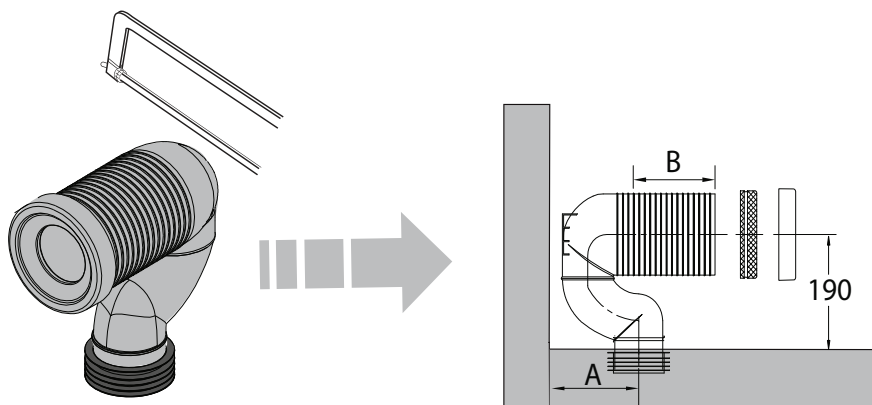


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)
140-149 mm.	10 mm.
150-159 mm.	20 mm.

4b

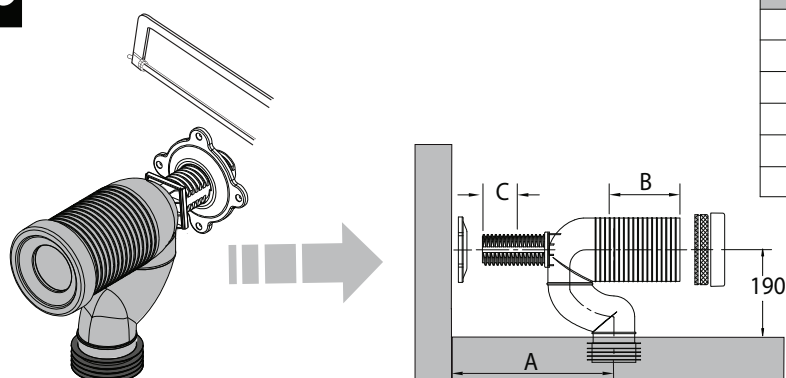


ROUGHING - IN (A)	CONNECTOR CUTOUT (B)	ROUGHING-IN (A)	CONNECTOR CUTOUT (B)
160-170 mm.	30 mm.	221-230 mm.	90 mm.
171-180 mm.	40 mm.	231-240 mm.	100 mm.
181-190 mm.	50 mm.	241-250 mm.	110 mm.
191-200 mm.	60 mm.	251-260 mm.	120 mm.
201-210 mm.	70 mm.	261-270 mm.	130 mm.
211-220 mm.	80 mm.	C= 116 - (A-160)	


5a

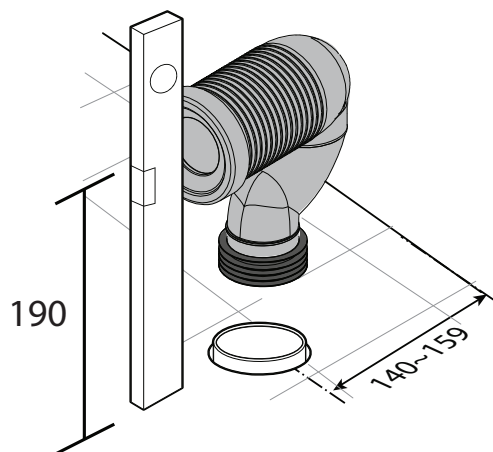


5b


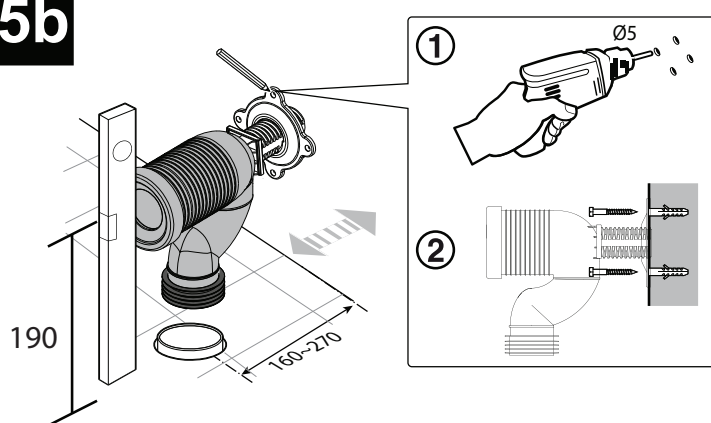


6



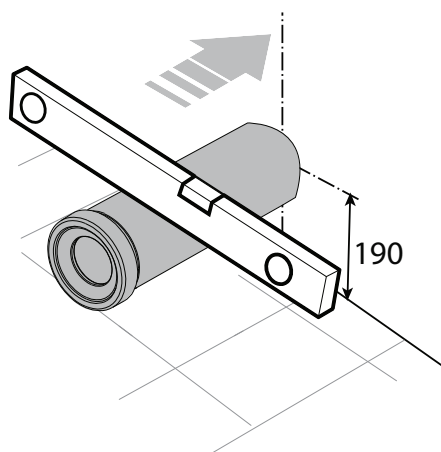


7

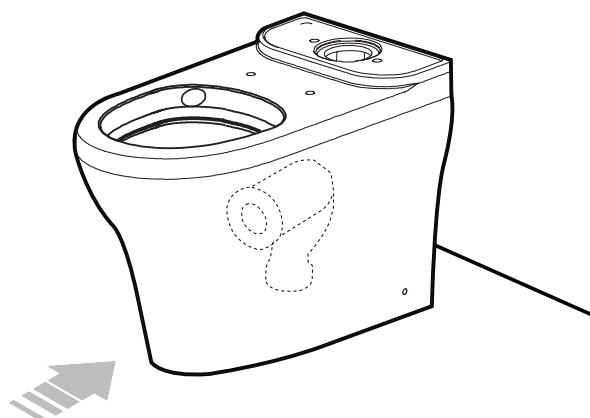

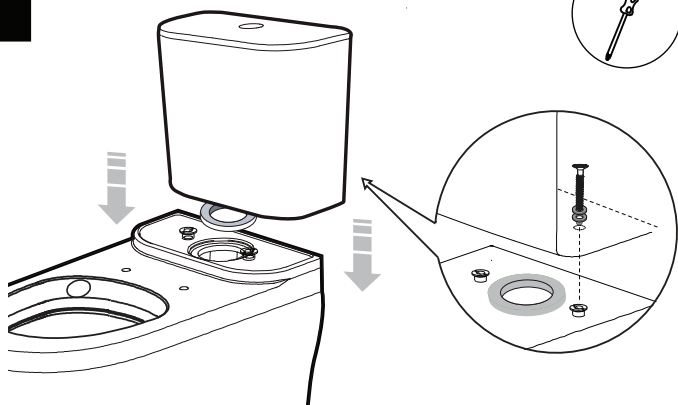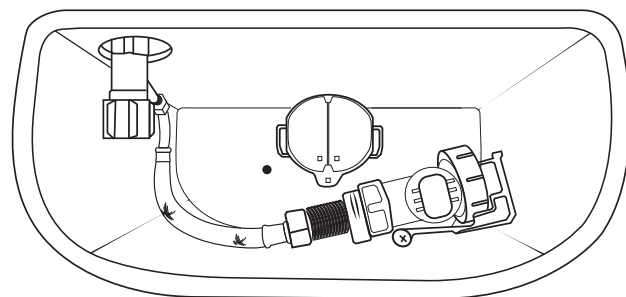**8****9**

The flexible hose in this cistern must not be submerged in water at any time.

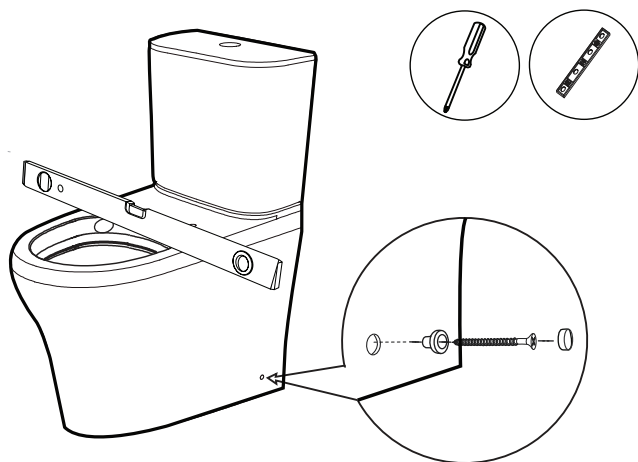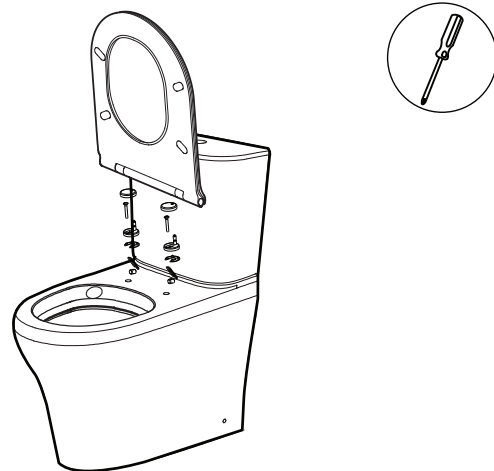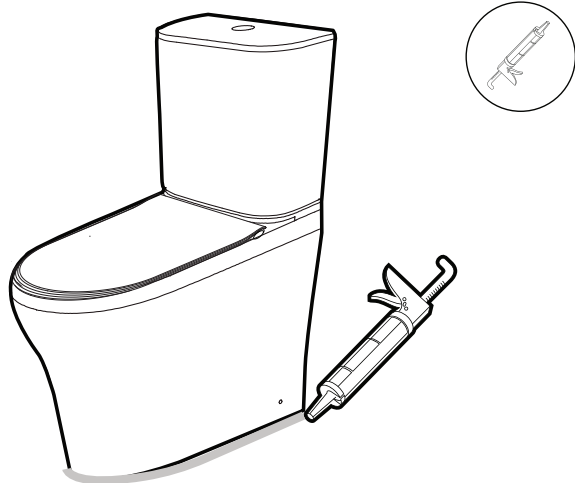10**11****12****13**

IMPORTANT

Before turning on water supply check:

1. Cistern is installed properly
2. All moving components operate freely
3. All couplings are tightened correctly

Now fill cistern and recheck water level:











4. Check carefully for leaks
5. Test the cistern flushes

Cygnet Hygiene Rim Seat & Cover

CL6157M-6D

American Standard

Seat and Cover Installation Manual

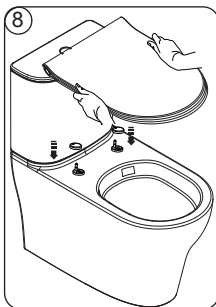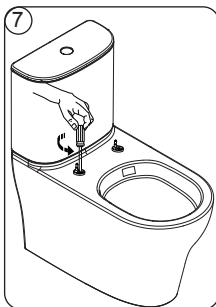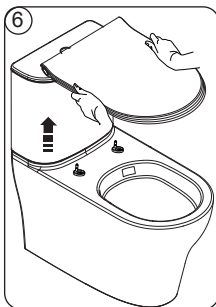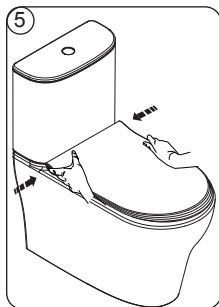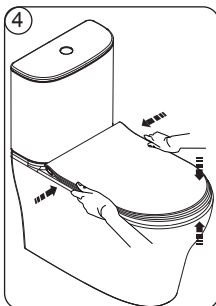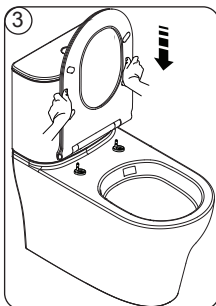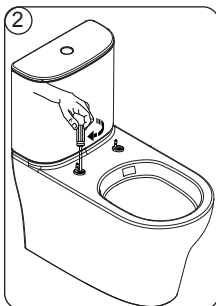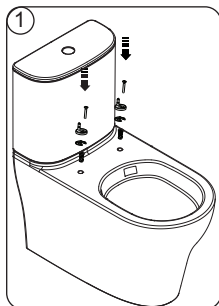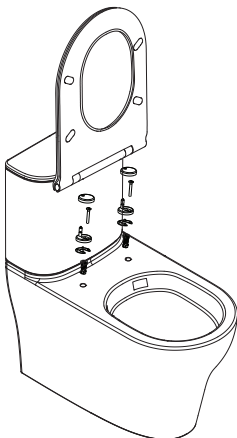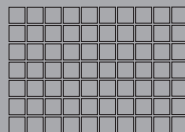

Warning: Do not stand or place heavy objects on the seat cover. Do not use inappropriate cleaners (toilet cleaner, residential cleaner, bleach, benzene, paint thinner, cleaning powder, cresol or any other strong acid and strong alkali, etc corrosive solution) to clean the seat cover or hinge base. Wipe seat and cover with a wet soft cloth that is wrung dry. Keep children from standing on the seat, to avoid body injury. Do not open/close the seat and cover using excessive force. Do not expose the product to direct sunlight.